

DECORAWALL INC.

Promould® Line

STARTER STRIPS

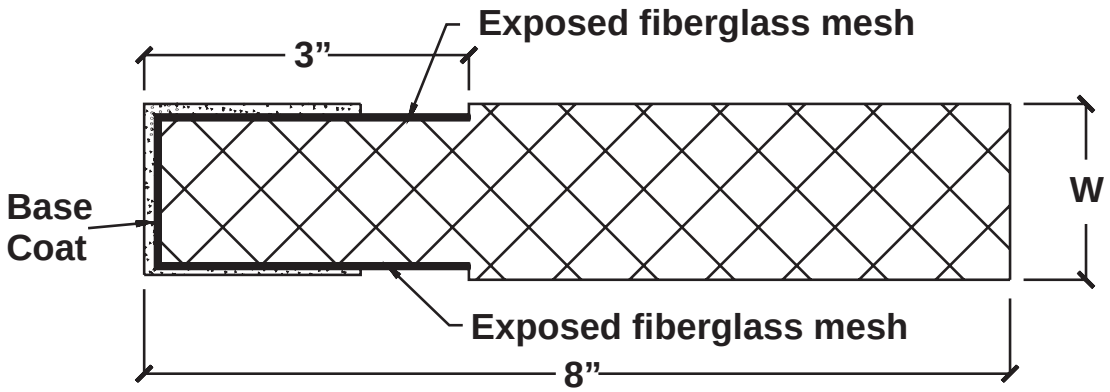


Product Code	W
ST 001	1”
ST 002	1 ½”
ST 003	2”

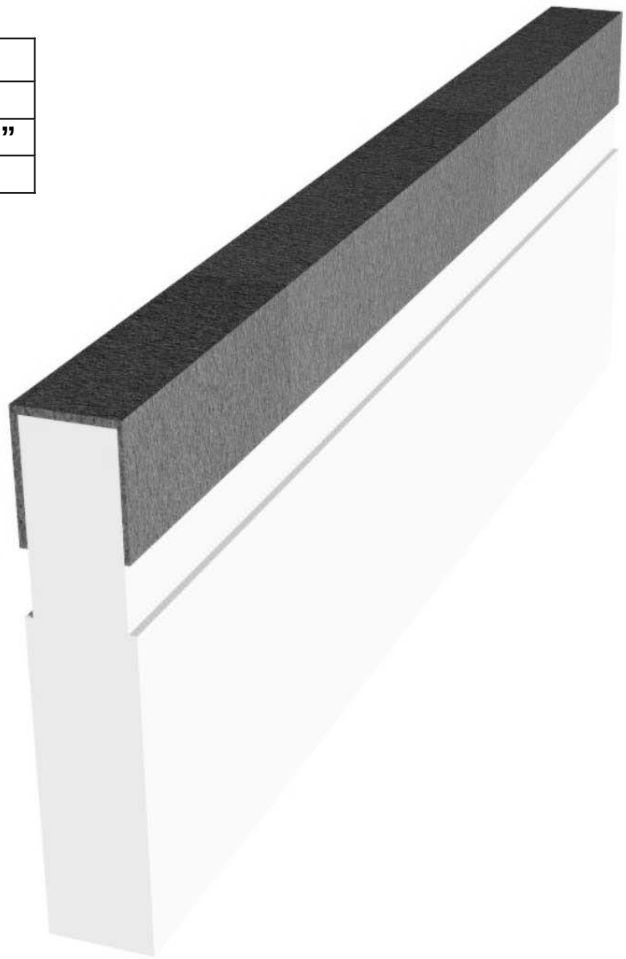


DECORAWALL INC.

BEVELED STARTER STRIPS

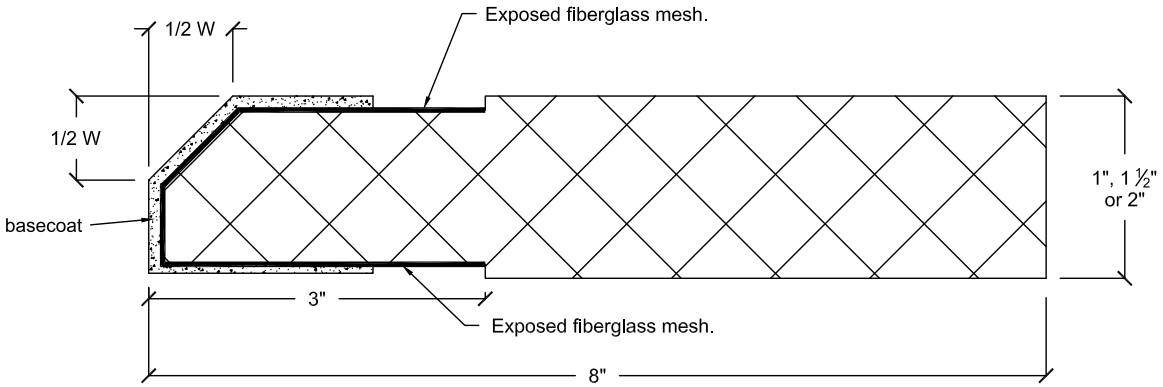


Product Code	W
ST 010	1″
ST 011	1 ½″
ST 012	2″

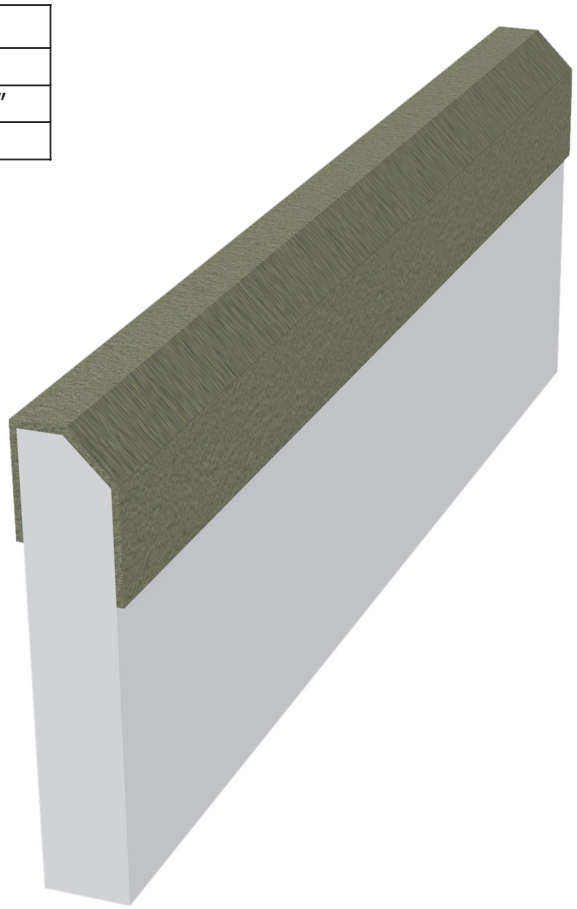

Promould® Line

DECORAWALL INC.

FLAT BANDS

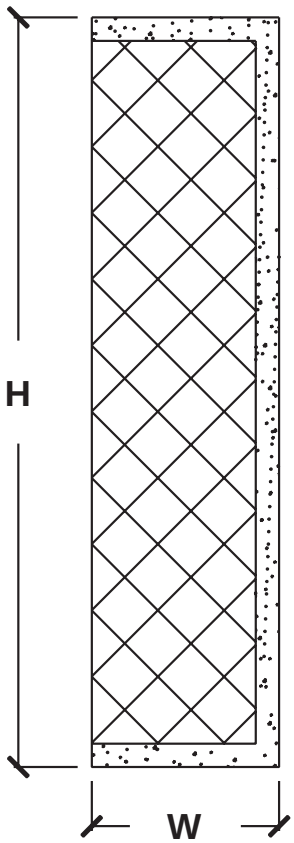


Product Code	H	W
FB 001	4”	1”
FB 002	6”	1”
FB 003	8”	1”
FB 004	10”	1”
FB 005	12”	1”
FB 006	6”	2”
FB 007	8”	1 ½”
FB 008	8”	2”
FB 009	12”	1 ½”
FB 010	12”	2”



Promould® Line

DECORAWALL INC.

SILLS - OS 001

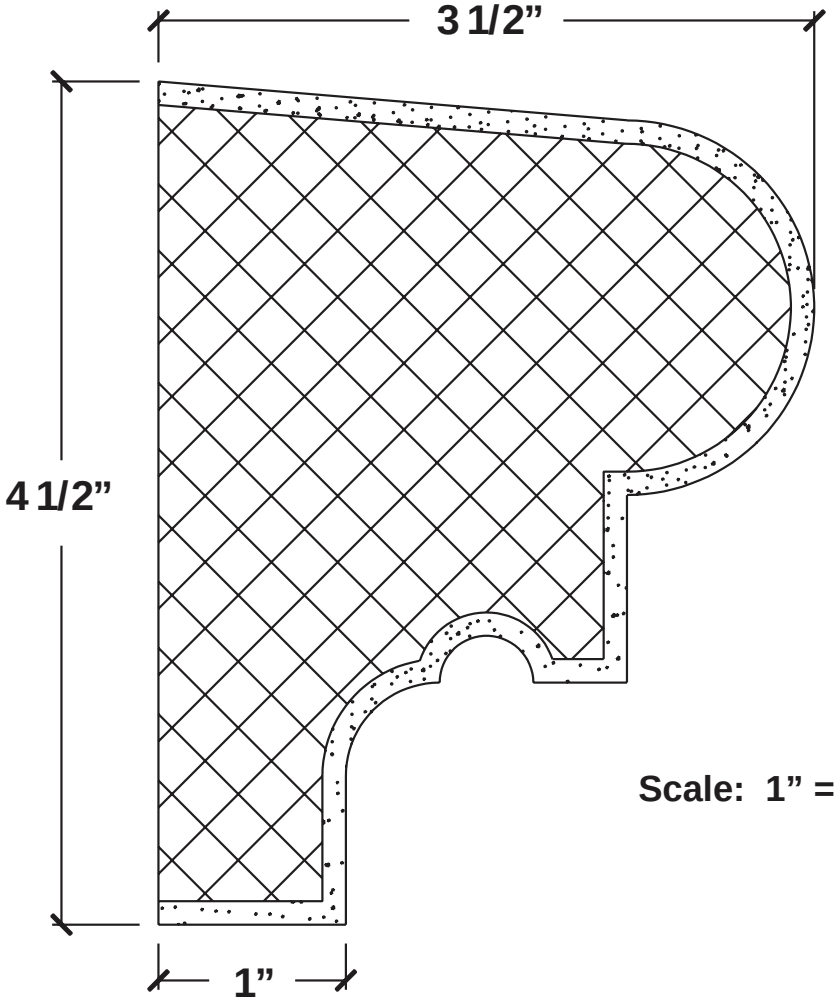


Scale: 1” = 1”




Promould® Line

DECORAWALL INC.

SILLS - OS 002

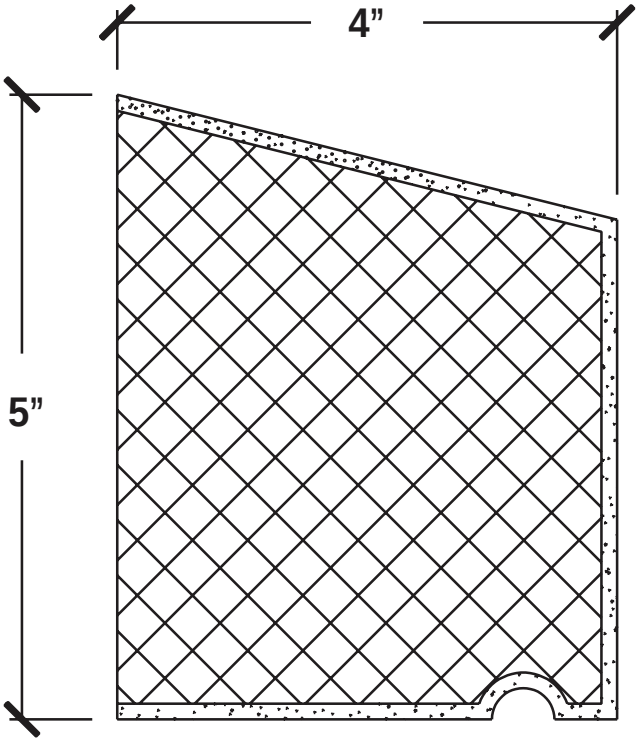


Scale: 1” = 1 1/2”

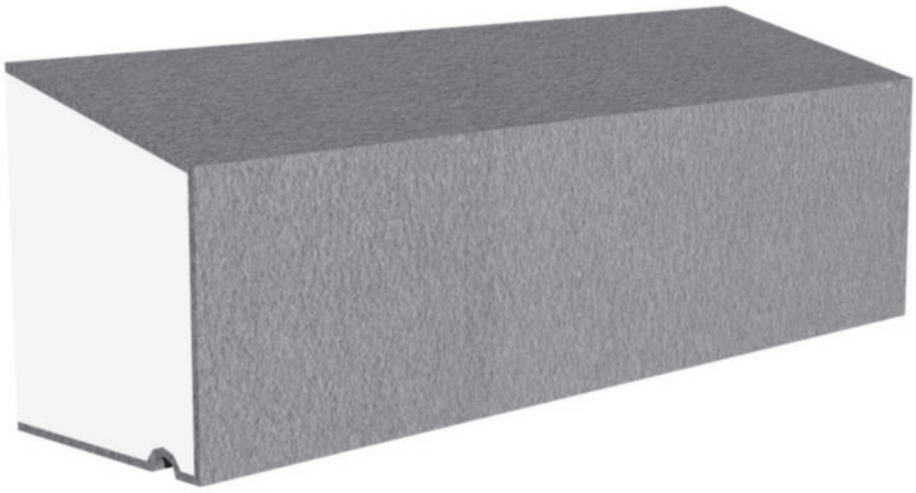


Promould® Line

DECORAWALL INC.

SILLS - OS 003

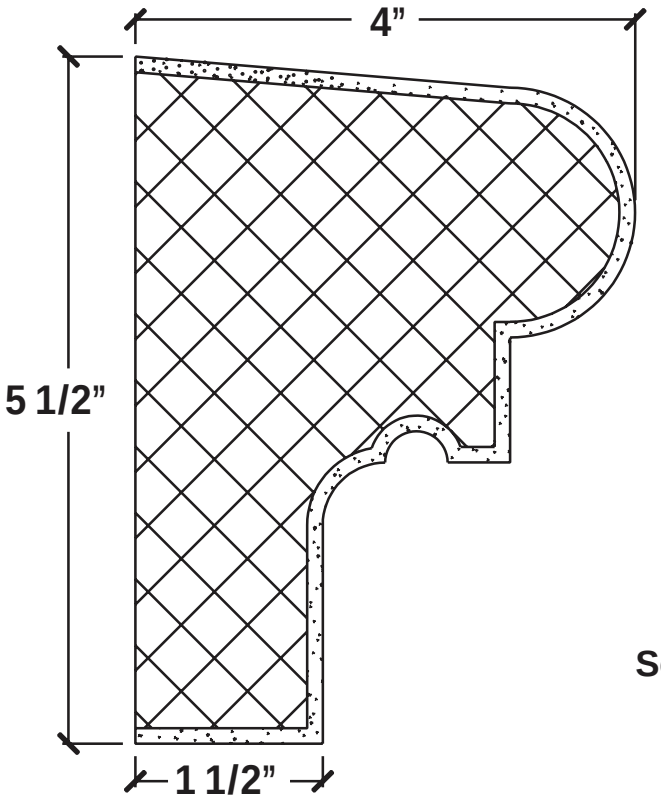


Scale: 1” = 1 1/2”

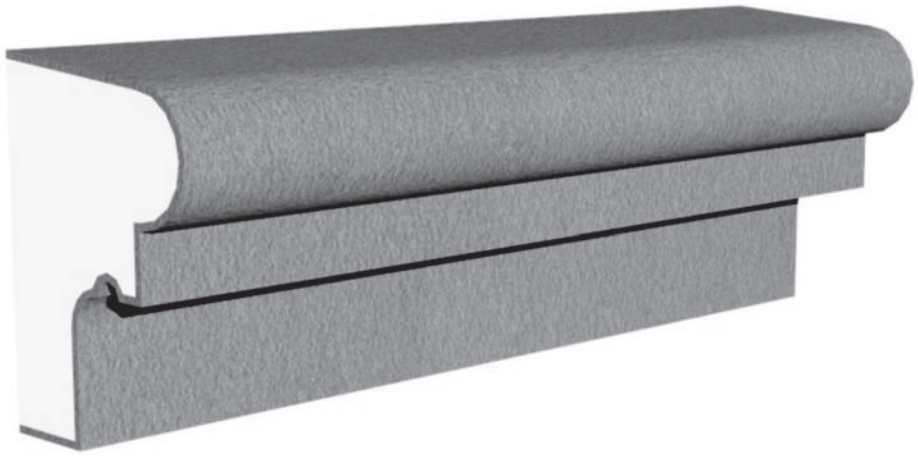


Promould® Line

DECORAWALL INC.

SILLS - OS 004

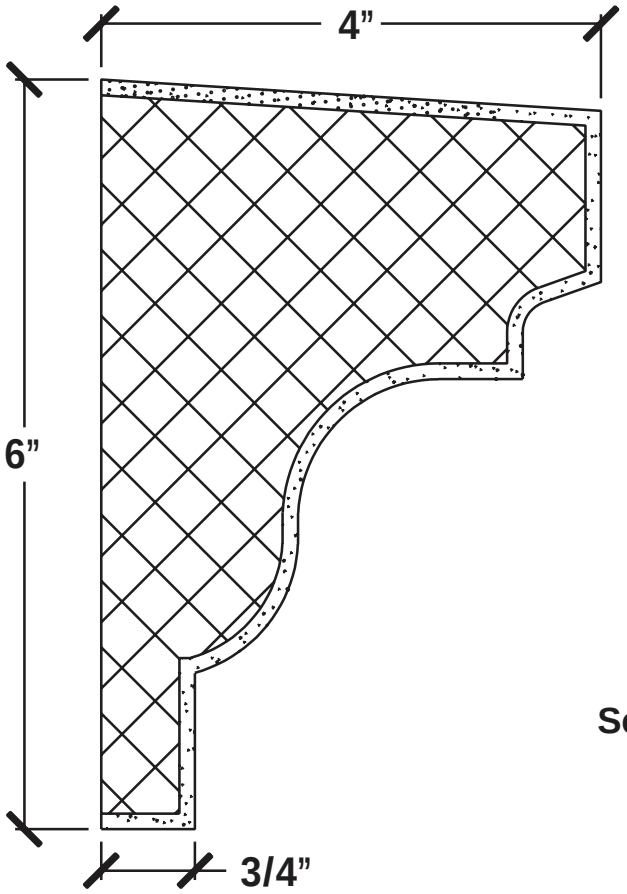


Scale: 1” = 1 1/2”

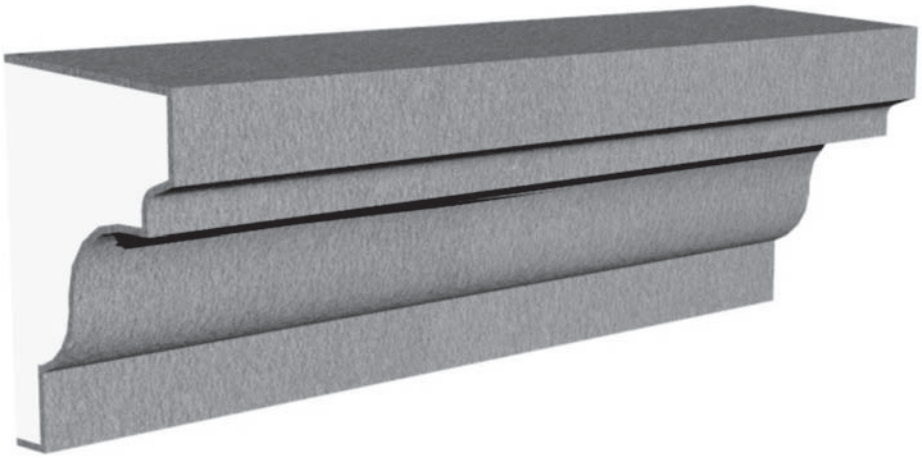


Promould® Line

DECORAWALL INC.

SILLS - OS 005

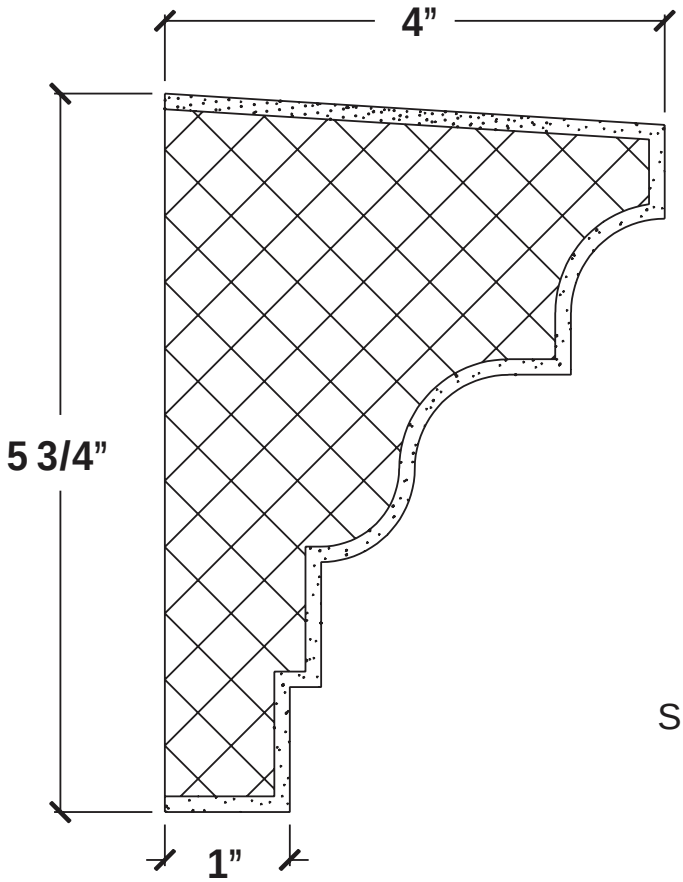


Scale: 1” = 1 1/2”

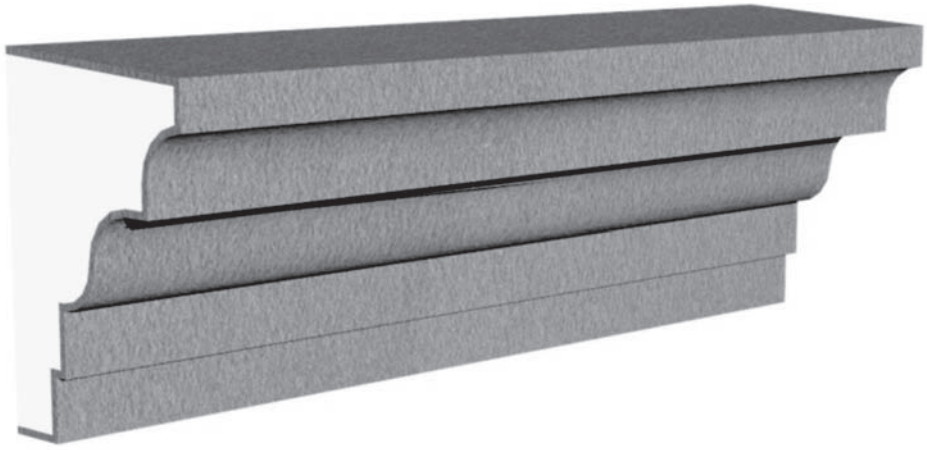


Promould® Line

DECORAWALL INC.

SILLS - OS 006

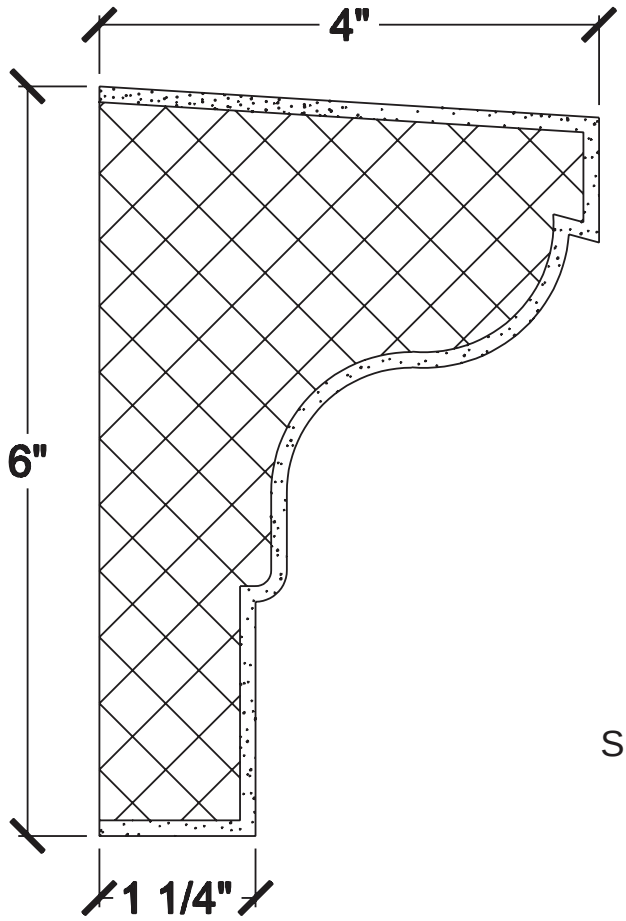


Scale: 1” = 1 1/2”

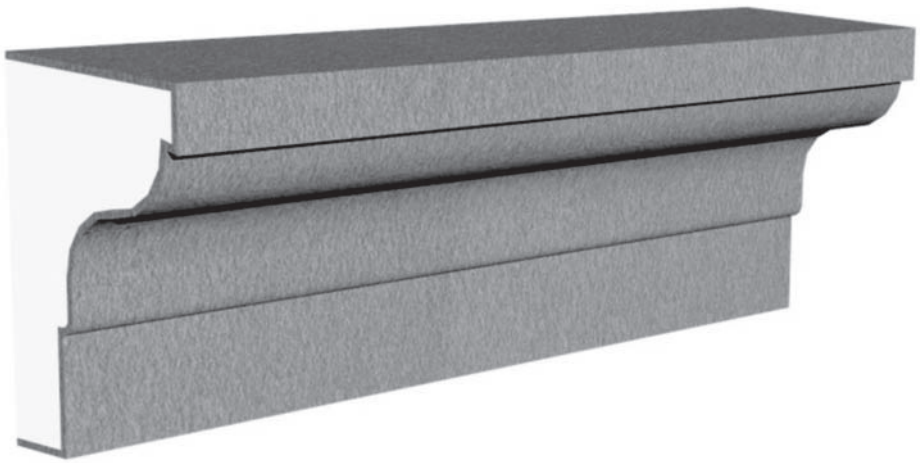


Promould® Line

DECORAWALL INC.

SILLS - OS 007

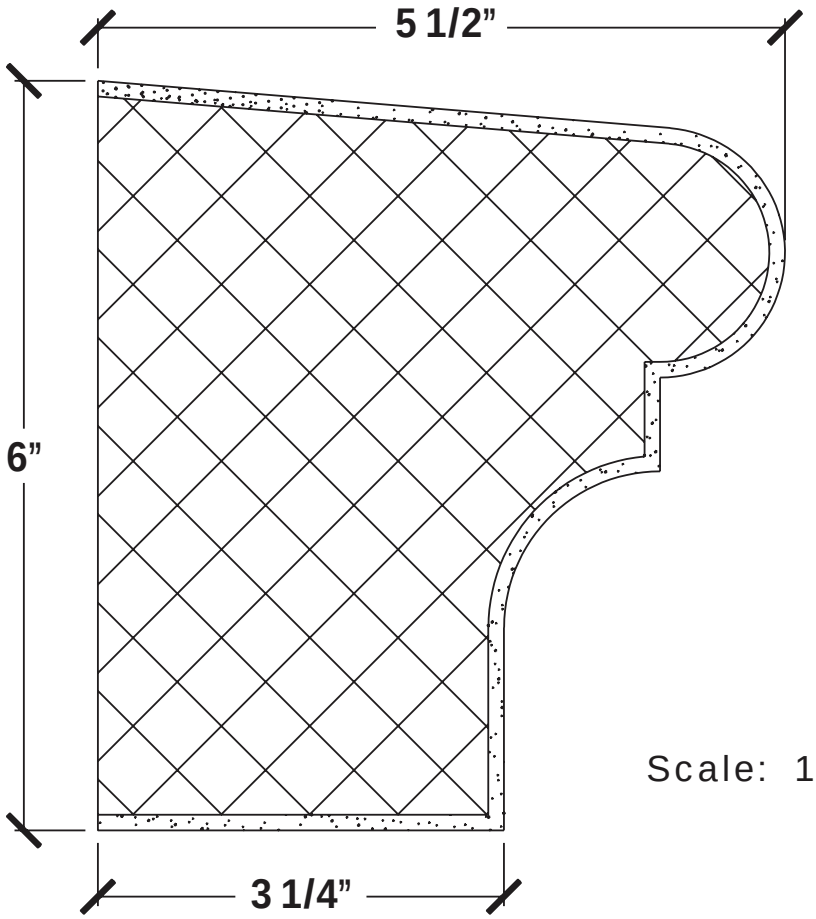


Scale: 1” = 1 1/2”

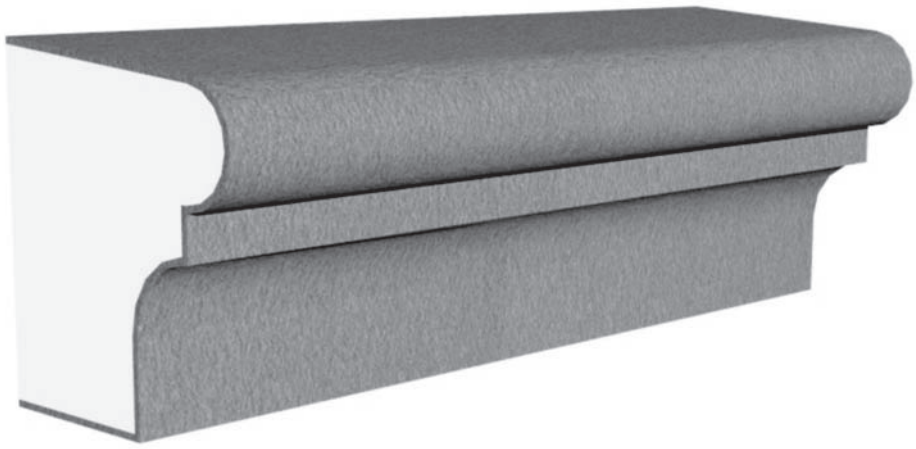


Promould® Line

DECORAWALL INC.

SILLS - OS 008

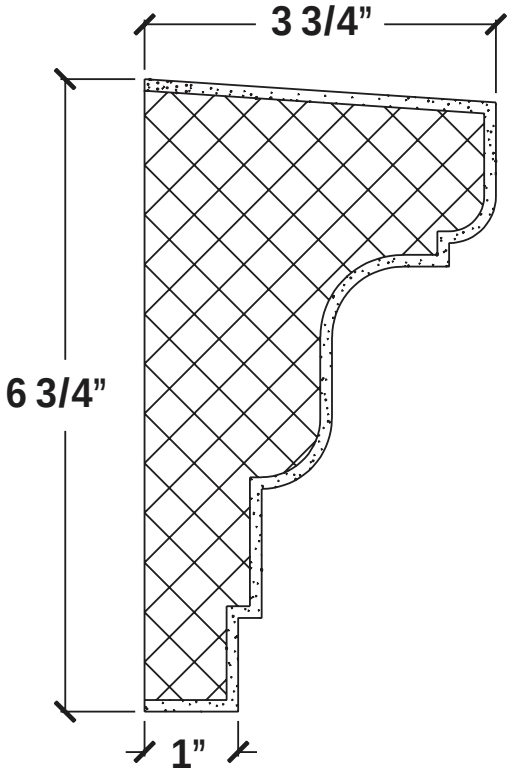


Scale: 1” = 2”

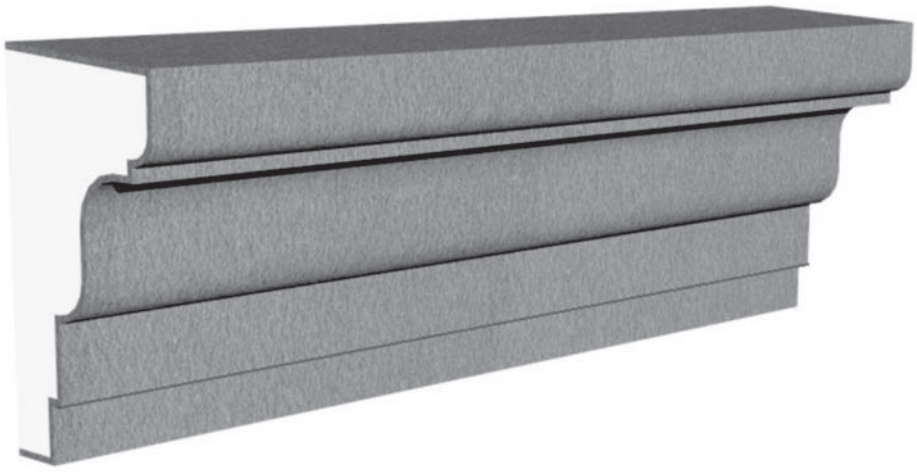


Promould® Line

DECORAWALL INC.

SILLS - OS 009

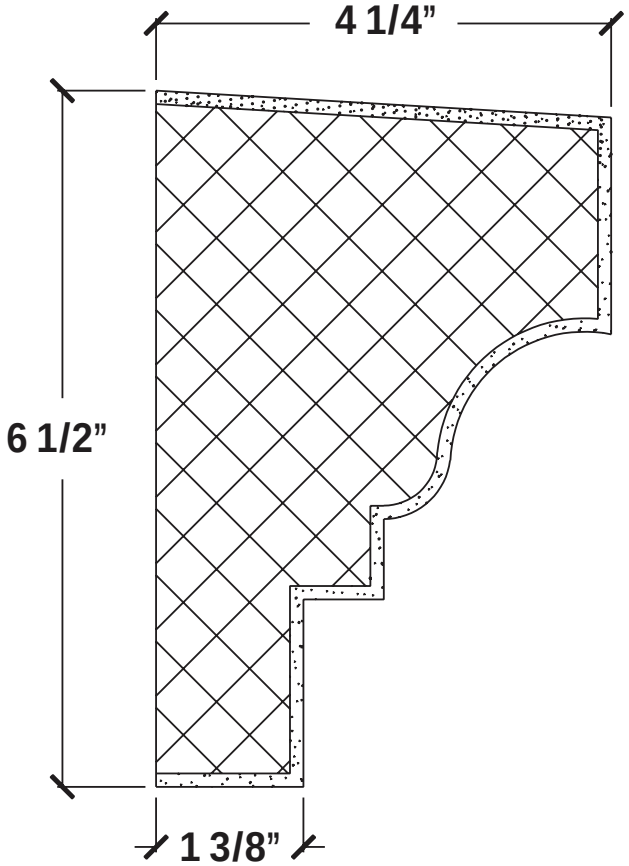


Scale: 1” = 1 3/4”

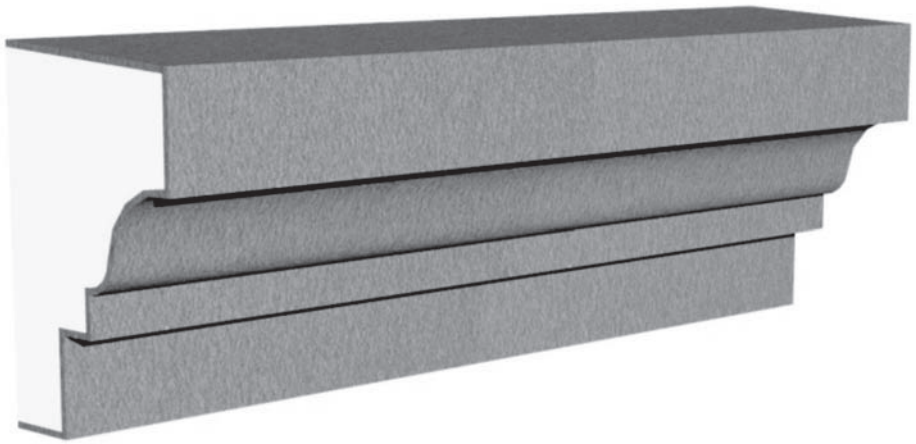


Promould® Line

DECORAWALL INC.

SILLS - OS 010

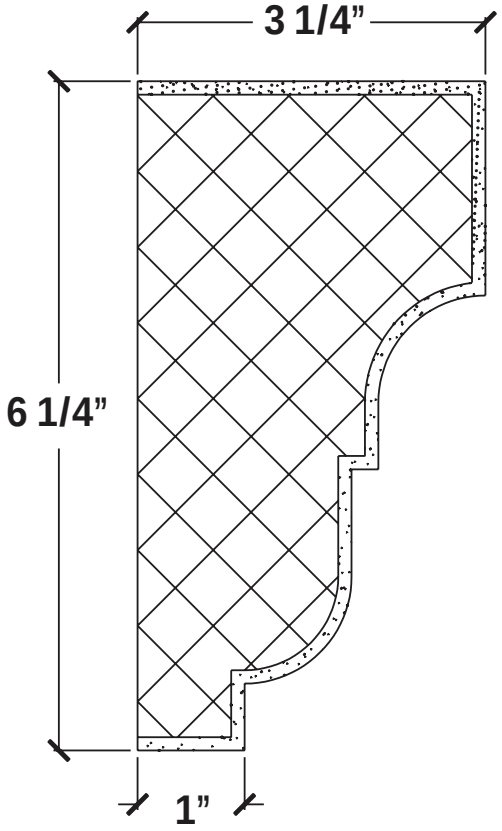


Scale: 1” = 1 3/4”

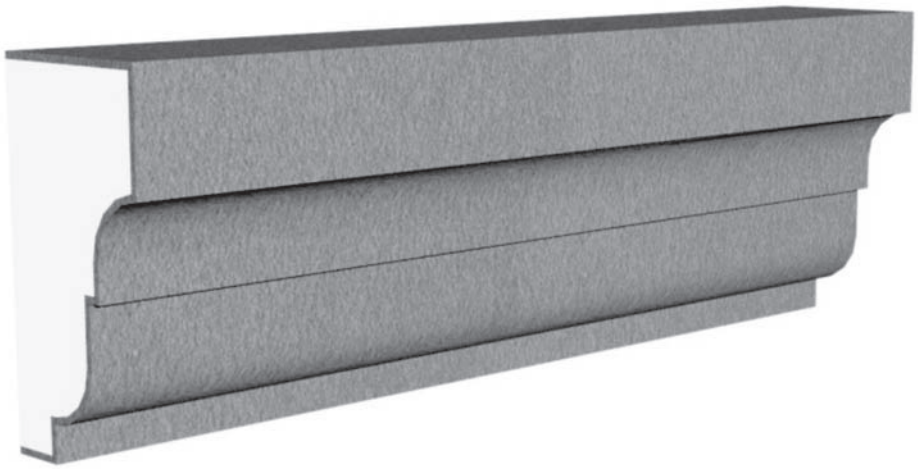


Promould® Line

DECORAWALL INC.

SILLS - OS 011

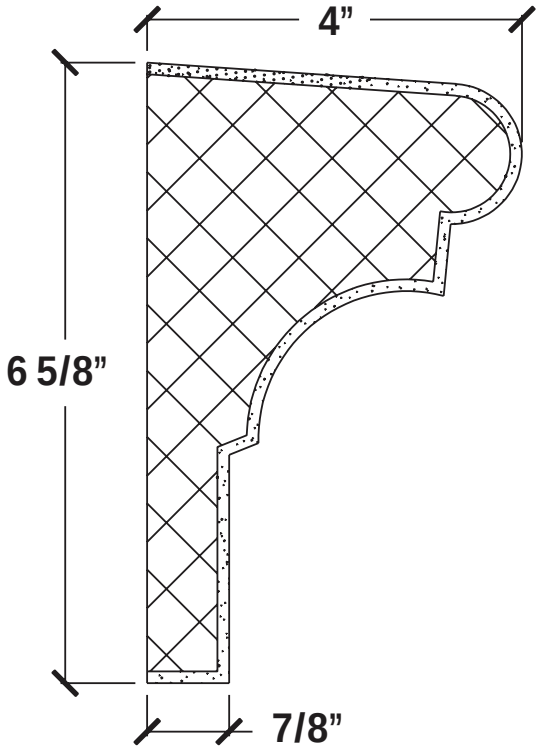


Scale: 1” = 2”

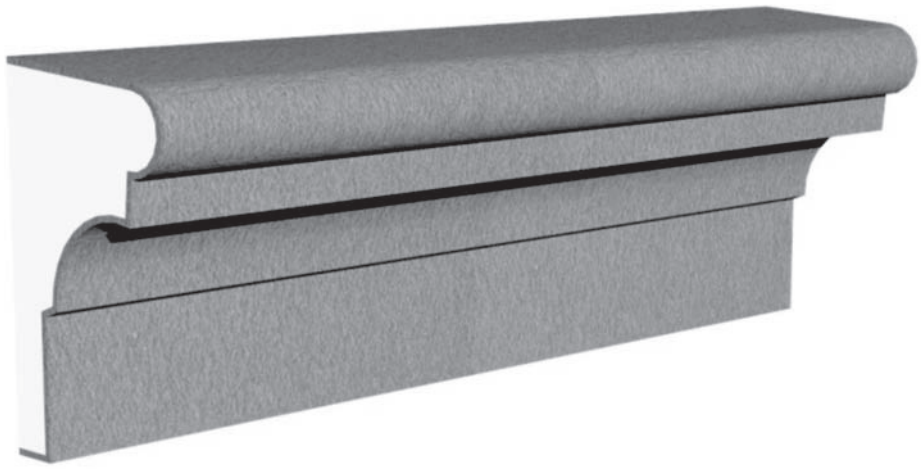


Promould® Line

DECORAWALL
INC.

SILLS - OS 012

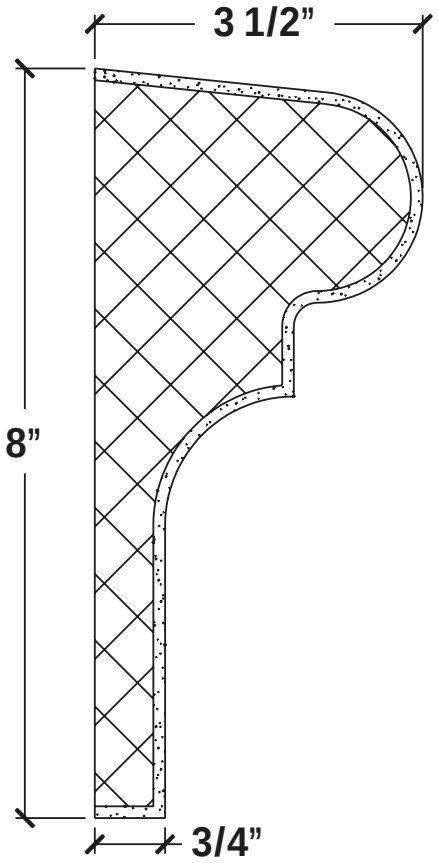


Scale: 1” = 2”

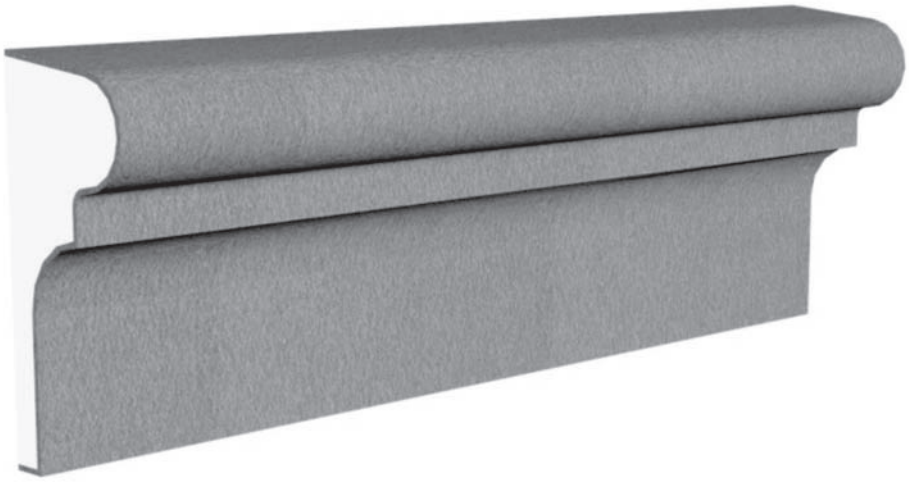


Promould® Line

DECORAWALL
INC.

SILLS - OS 013

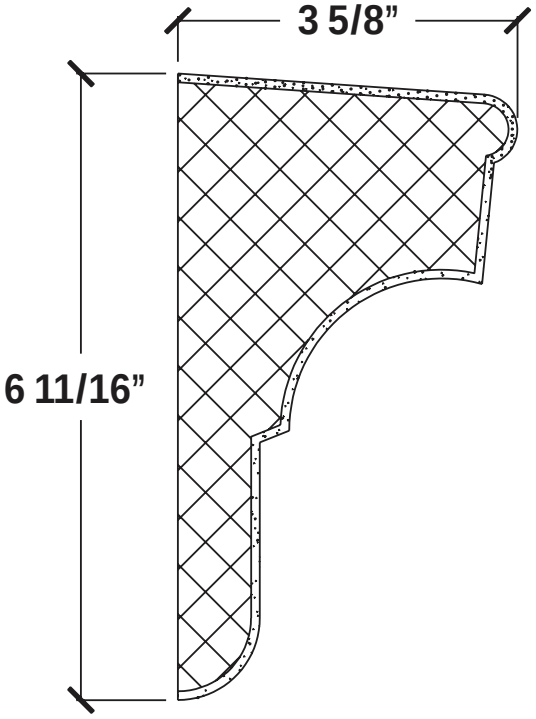

Scale: 1” = 2”

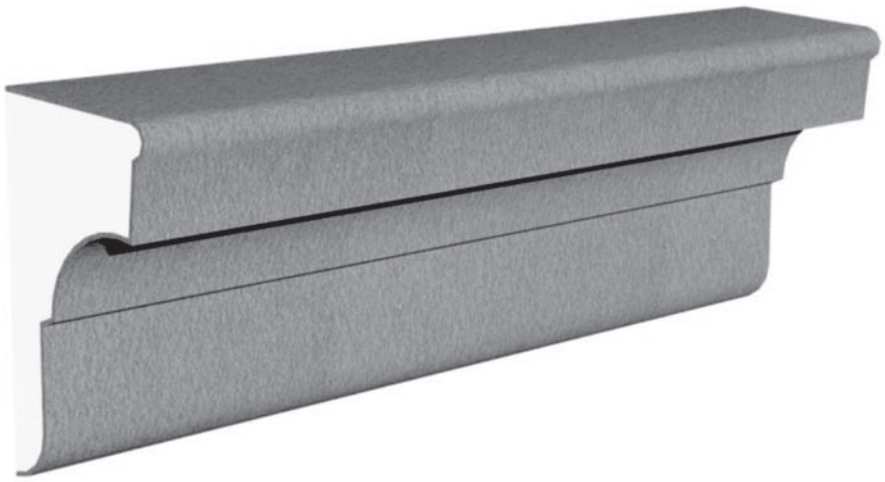


Promould® Line


DECORAWALL INC.

Promould® Line

SILLS - OS 014

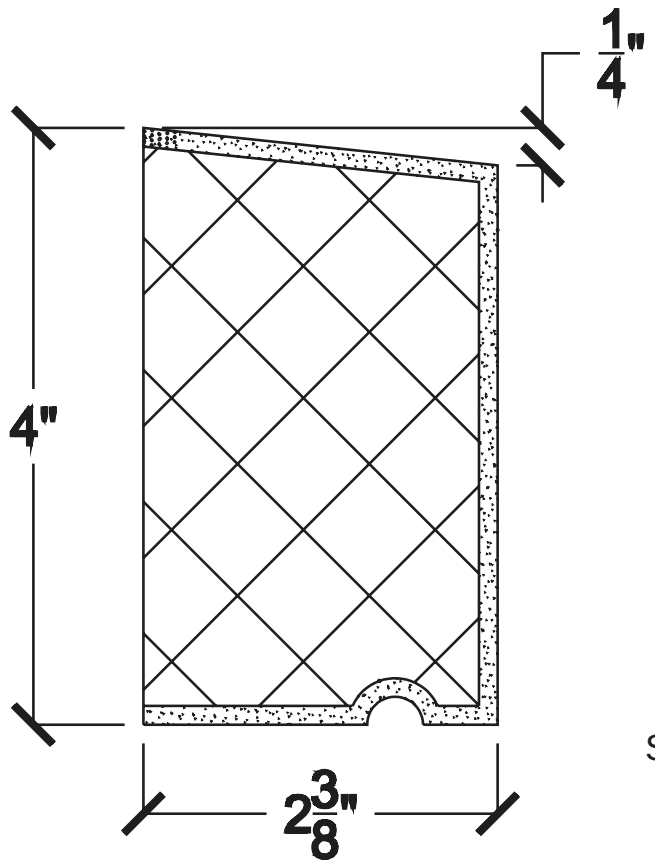


Scale: 1” = 1 1/4”

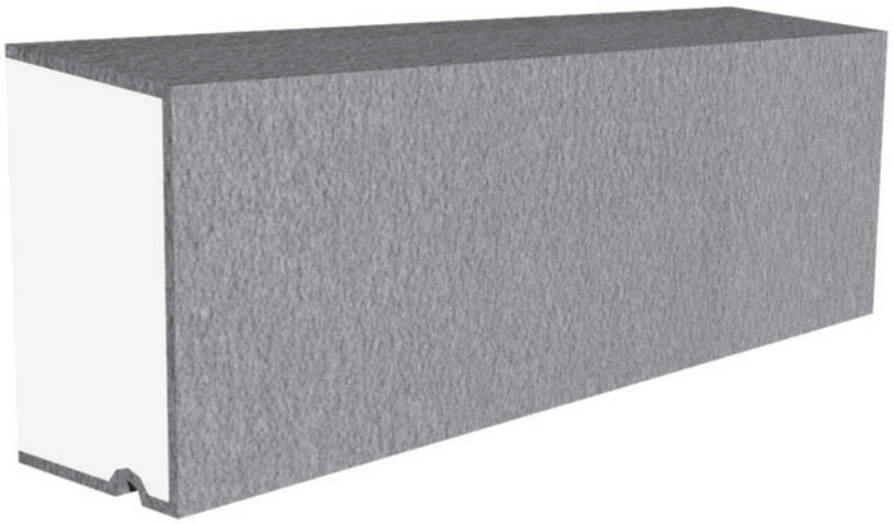

DECORAWALL INC.

TRIMS - OT 001

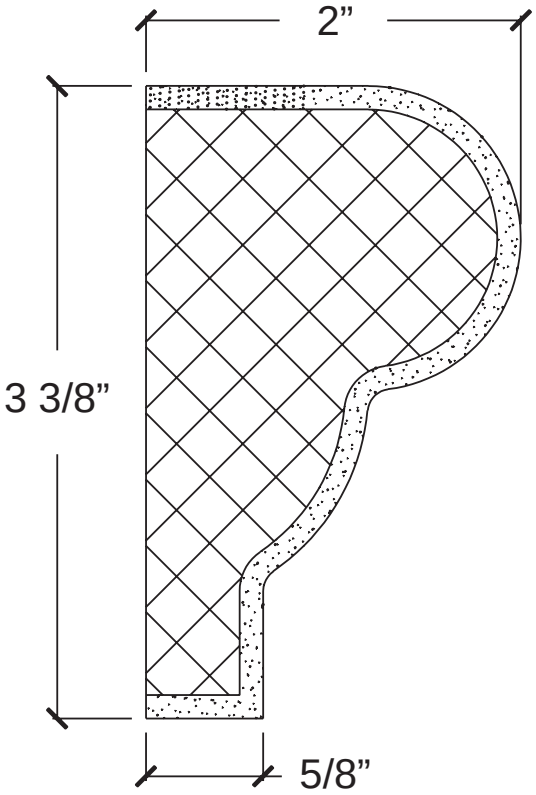

Scale: 1” = 1”




Promould® Line

www.decorawall.com

091220

DECORAWALL INC.

TRIMS - OT 002

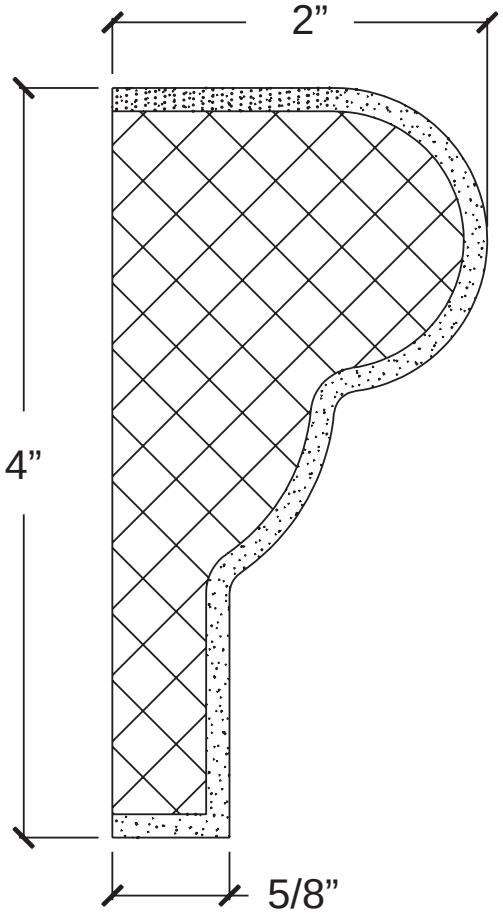

Scale: 1” = 1”




Promould® Line

www.decorawall.com


DECORAWALL INC.

Promould® Line

TRIMS - OT 003

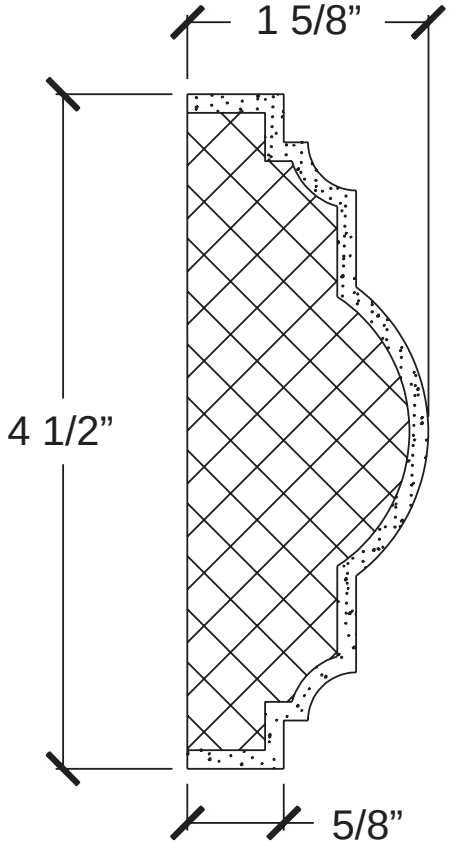


Scale: 1” = 1 1/4”

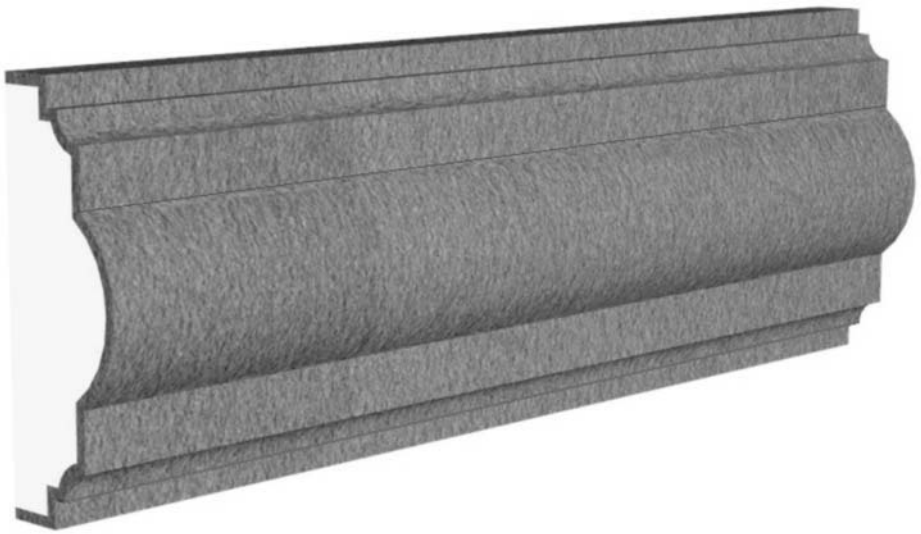


www.decorawall.com

DECORAWALL INC.

TRIMS - OT 004

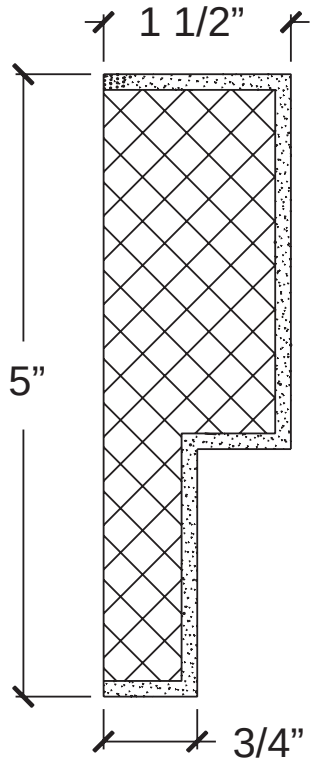

Scale: 1” = 1 1/2”

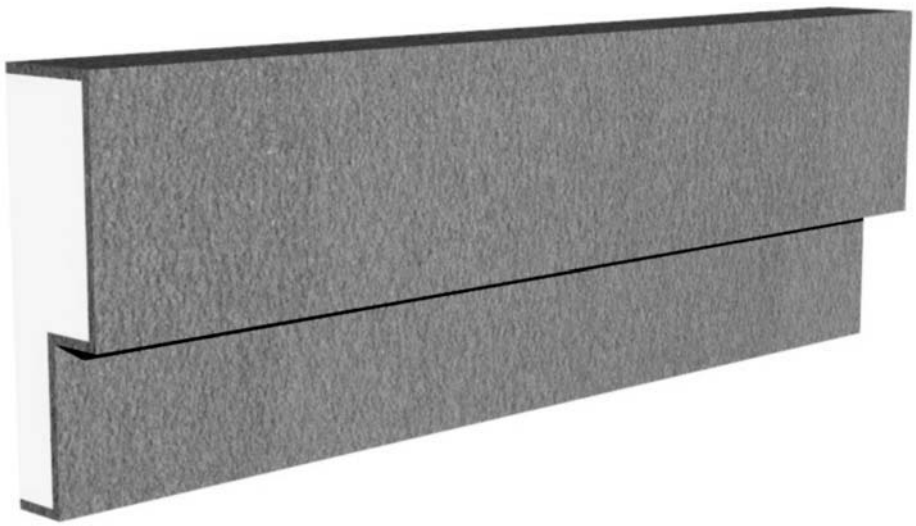


Promould® Line

www.decorawall.com

DECORAWALL INC.

TRIMS - OT 005

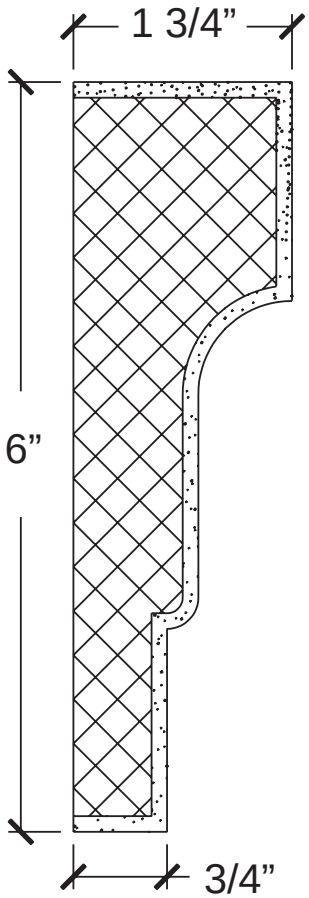

Scale: 1” = 1 1/2”




Promould® Line


www.decorawall.com

DECORAWALL INC.

TRIMS - OT 006

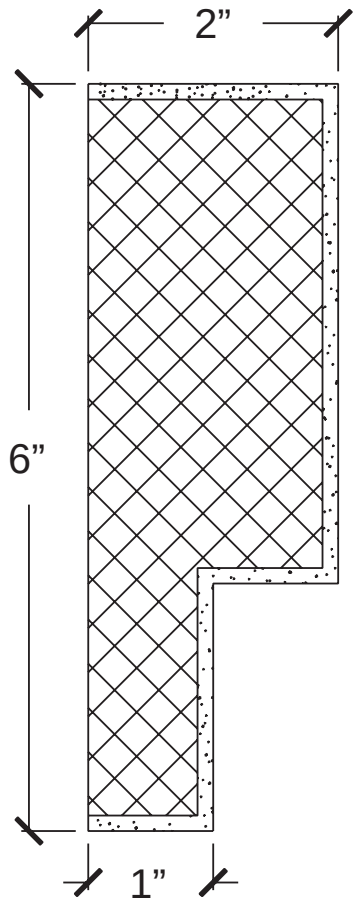

Scale: 1” = 1 1/2”

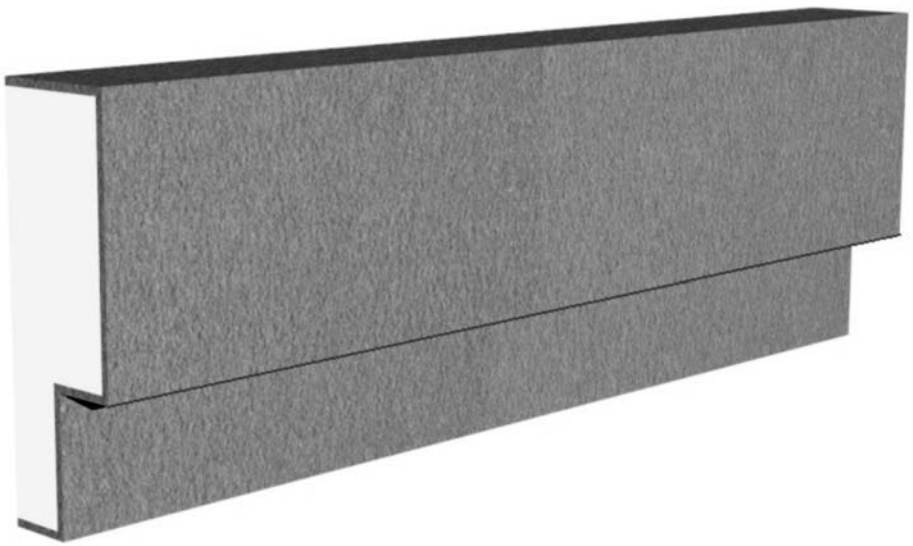


Promould® Line

www.decorawall.com

091220

DECORAWALL INC.

TRIMS - OT 007

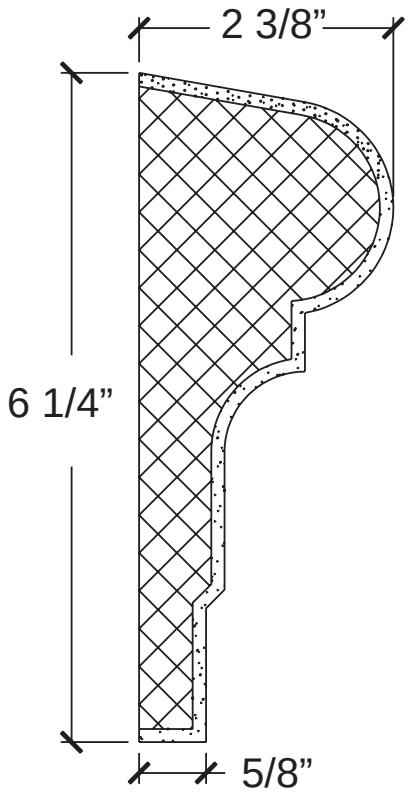


Scale: 1” = 1 3/4”



Promould® Line

DECORAWALL INC.

TRIMS - OT 009

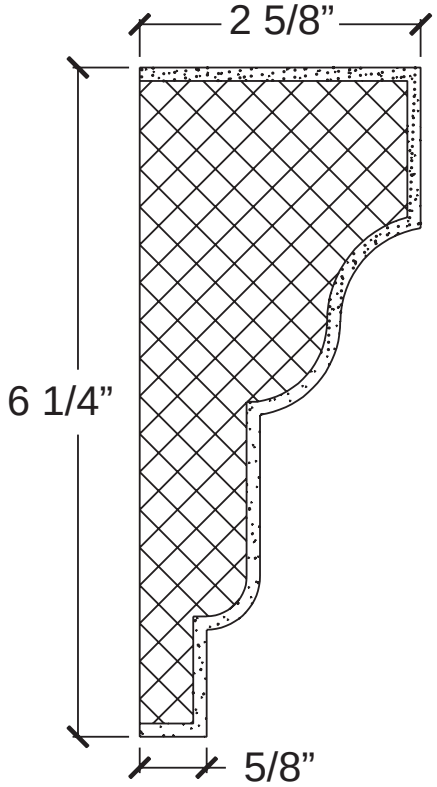

Scale: 1” = 1 3/4”




www.decorawall.com

Promould® Line

DECORAWALL INC.

TRIMS - OT 010

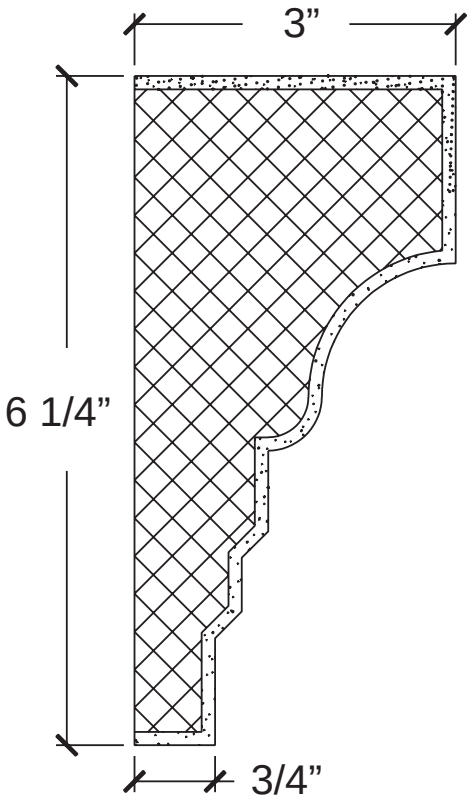

Scale: 1” = 1 3/4”




Promould® Line


www.decorawall.com

DECORAWALL®
INC.

TRIMS - OT 011

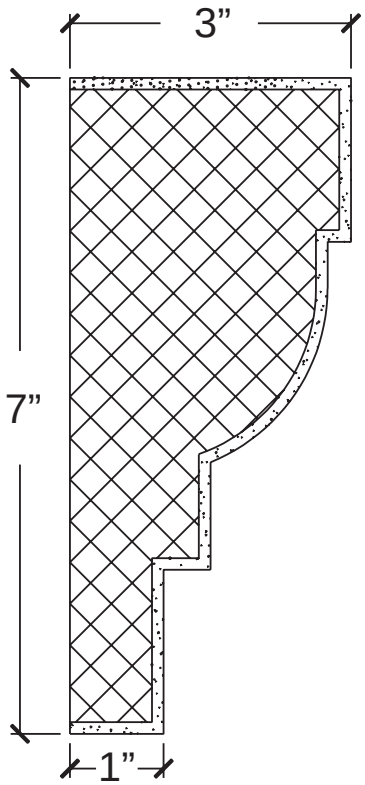

Scale: 1” = 2”

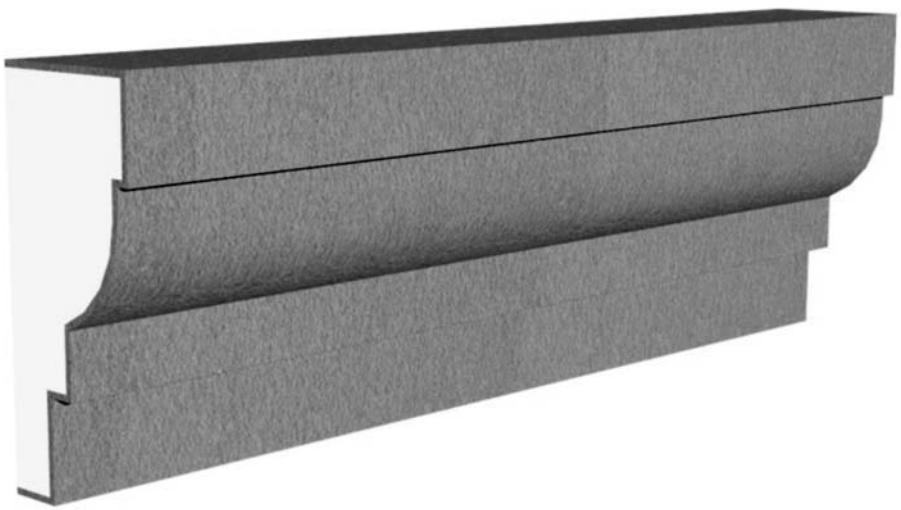


www.decorawall.com

Promould® Line

DECORAWALL INC.

Promould® Line

TRIMS - OT 013

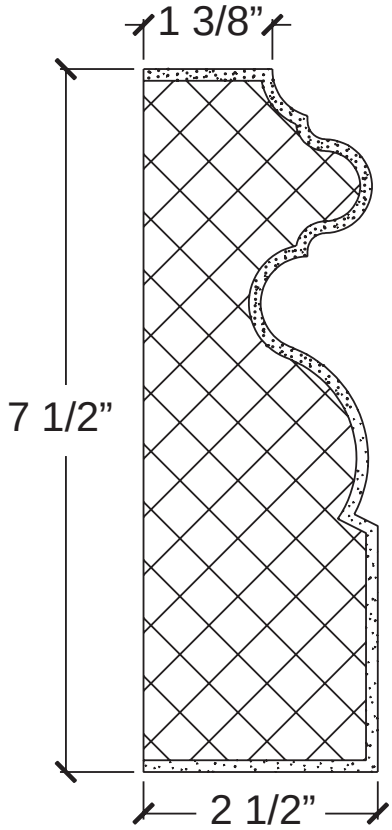

Scale: 1” = 2”




www.decorawall.com

DECORAWALL INC.

Promould® Line

TRIMS - OT 014

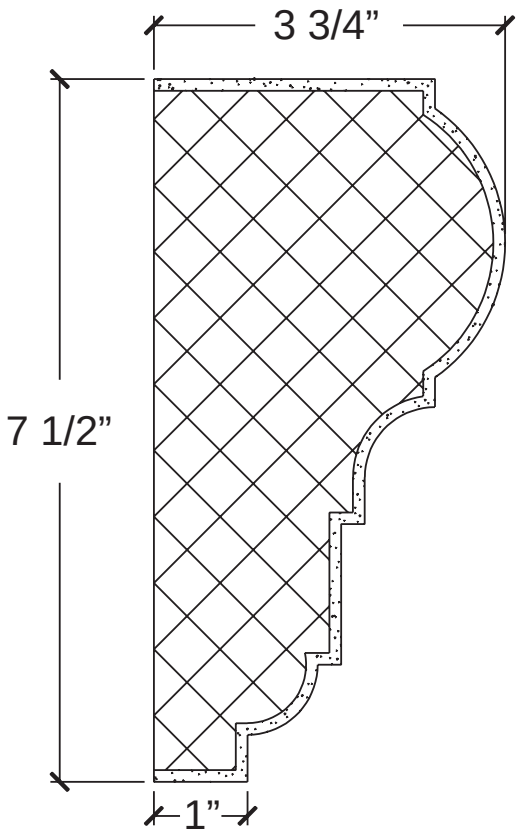

Scale: 1” = 2”




www.decorawall.com


DECORAWALL INC.

Promould® Line

TRIMS - OT 015

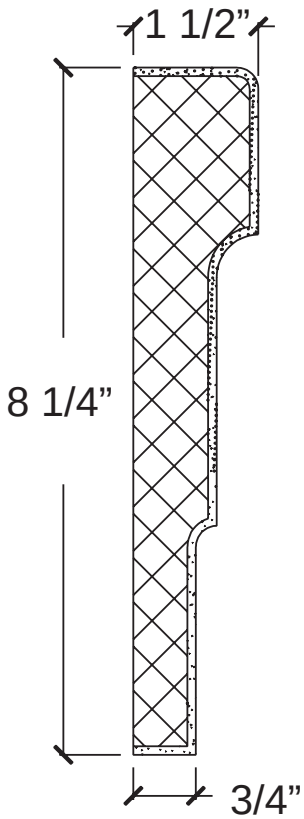


Scale: 1” = 2 1/4”

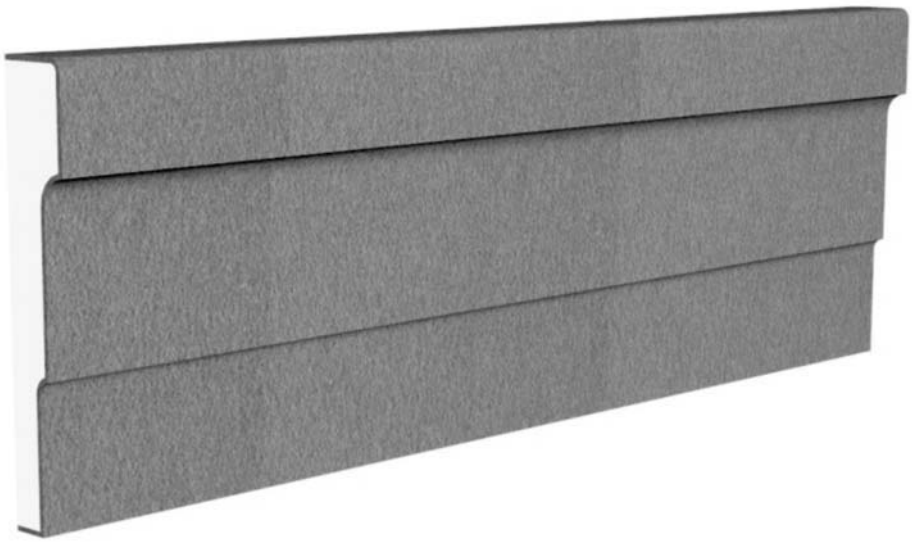


DECORAWALL INC.

TRIMS - OT 016

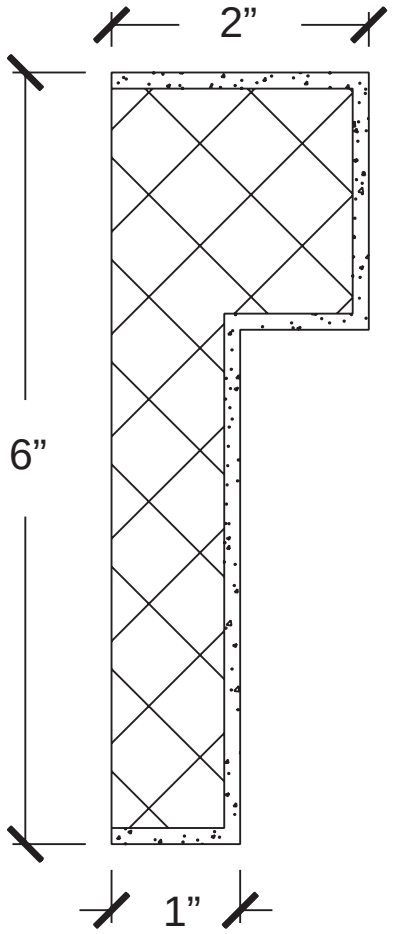

Scale: 1” = 1 1/2”

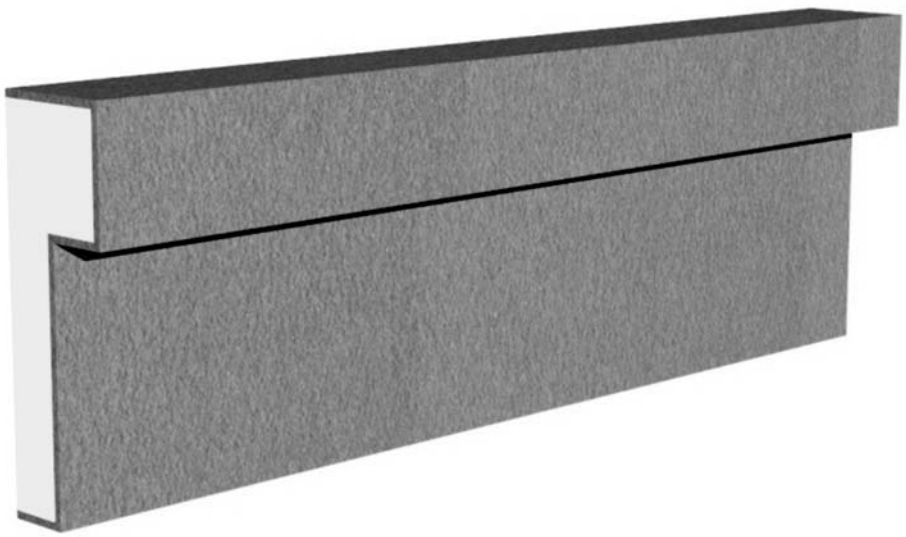


Promould® Line

www.decorawall.com

DECORAWALL INC.

TRIMS - OT 017

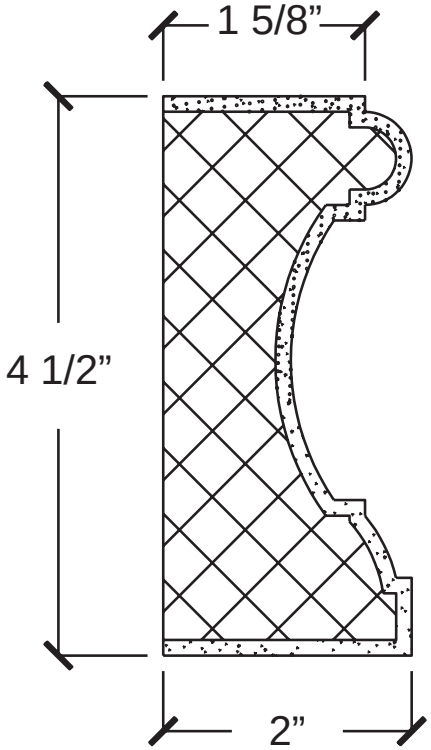

Scale: 1” = 1 1/2”




Promould® Line

www.decorawall.com

DECORAWALL INC.

TRIMS - OT 018

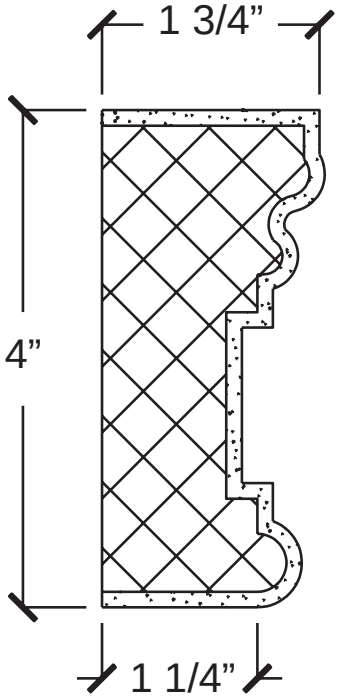

Scale: 1” = 1 1/2”





Promould® Line

www.decorawall.com

DECORAWALL
INC.

TRIMS - OT 019

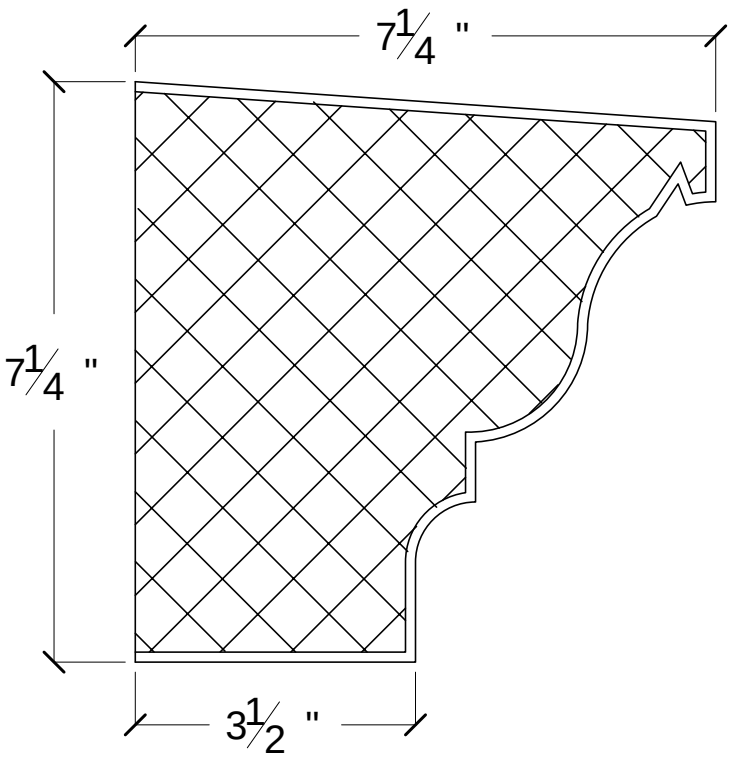

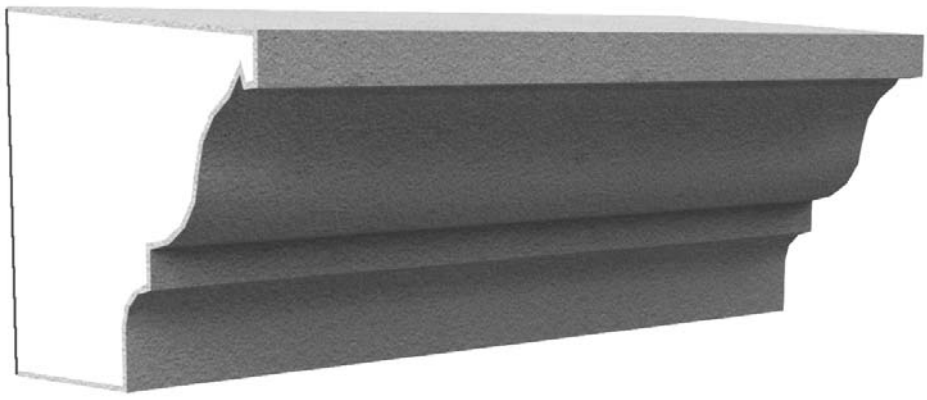


Promould® Line

www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 001

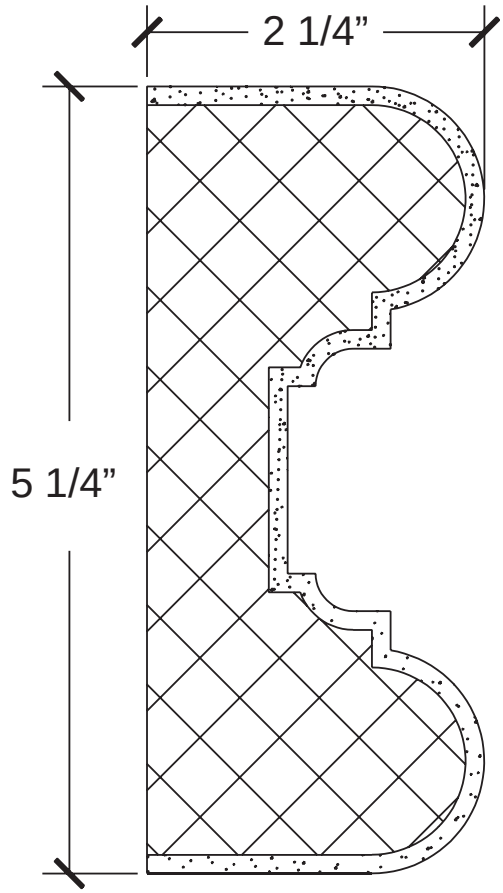

Scale: 1” = 1 1/4”




Promould® Line


www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 002

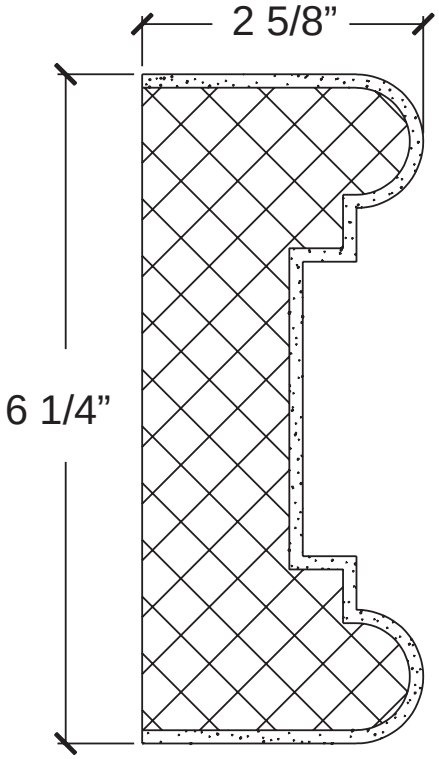

Scale: 1” = 1 3/4”

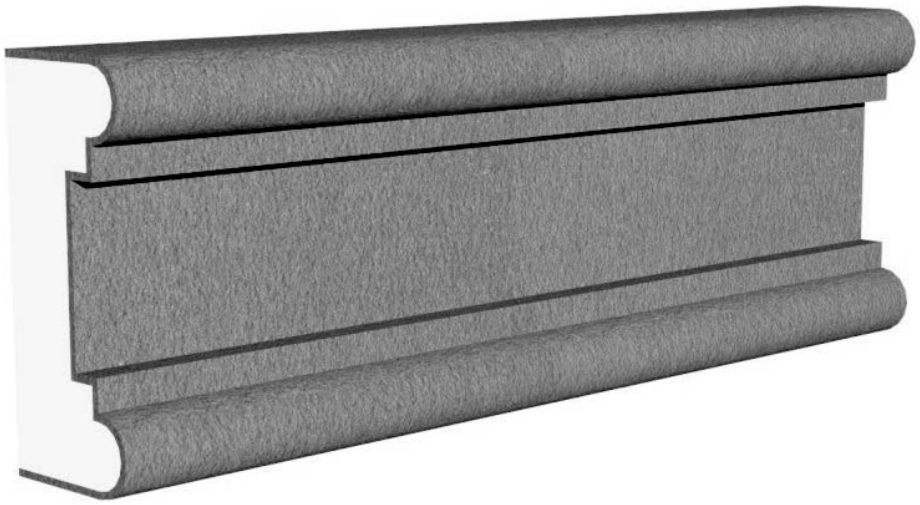


Promould® Line

www.decorawall.com

091220

DECORAWALL INC.

MIDBANDS - MB 003

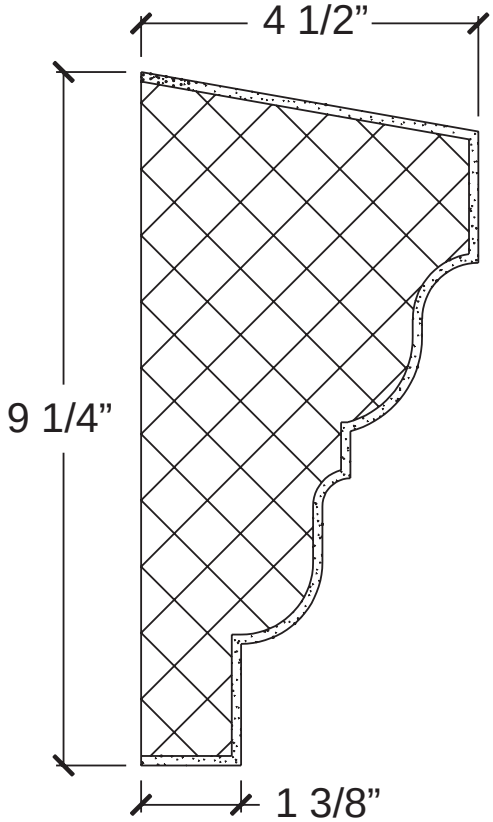

Scale: 1” = 2 1/2”




Promould® Line


www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 004

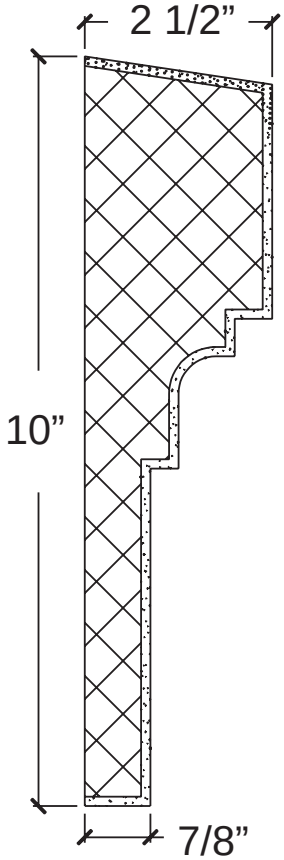

Scale: 1” = 2 1/2”

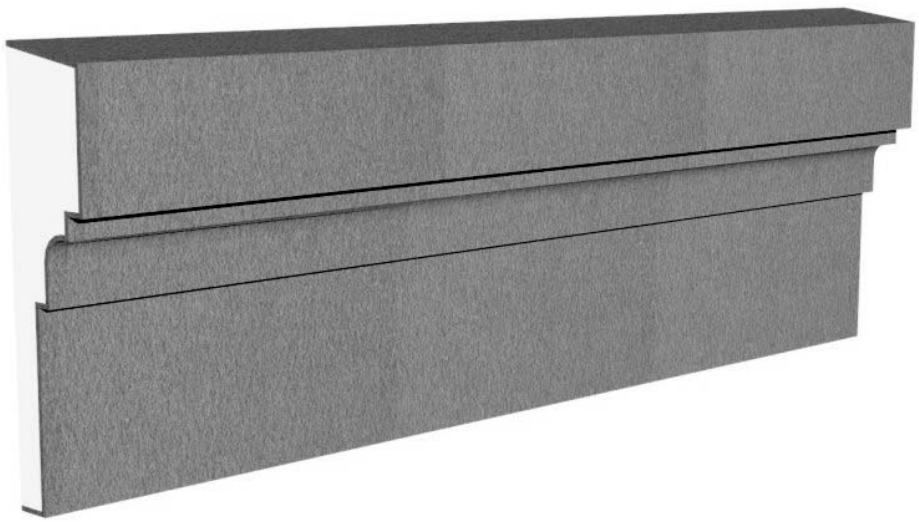


Promould® Line

091220

DECORAWALL INC.

Promould Line

MIDBANDS - MB 005

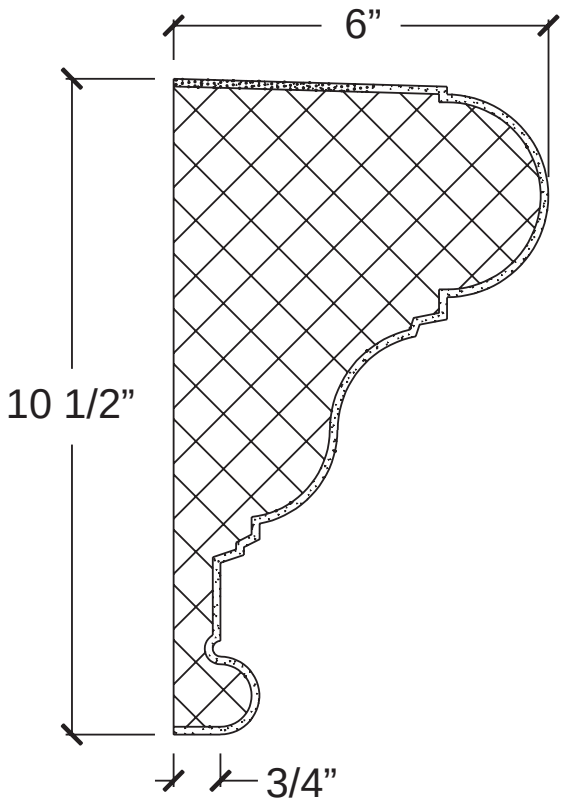


Scale: 1” = 3”




www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 007

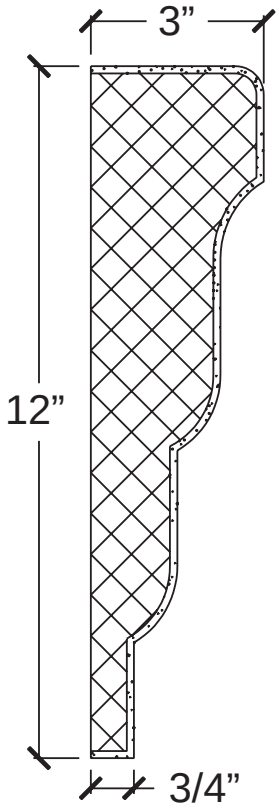

Scale: 1” = 3 1/4”

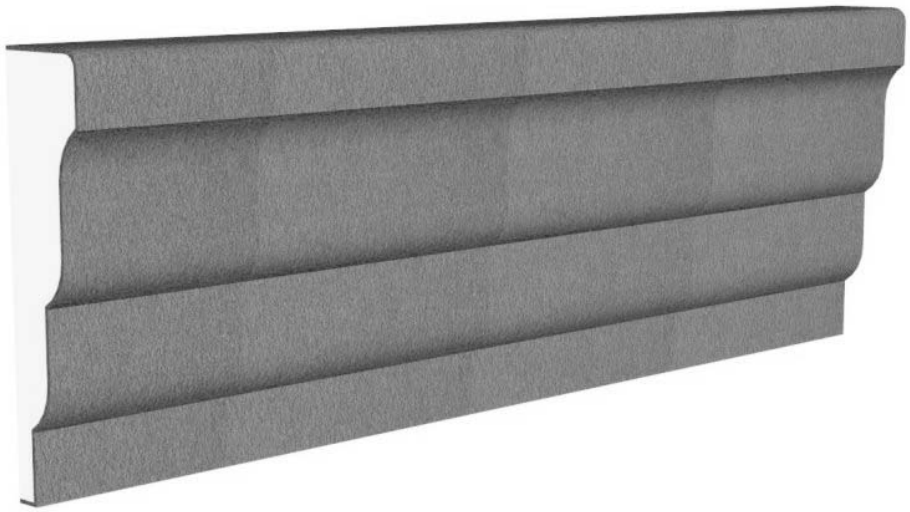


Promould® Line

www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 009

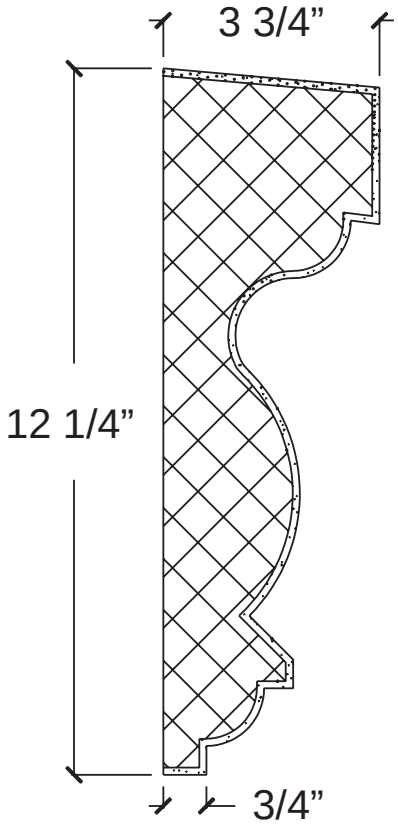

Scale: 1” = 3 1/4”




Promould® Line


www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 010

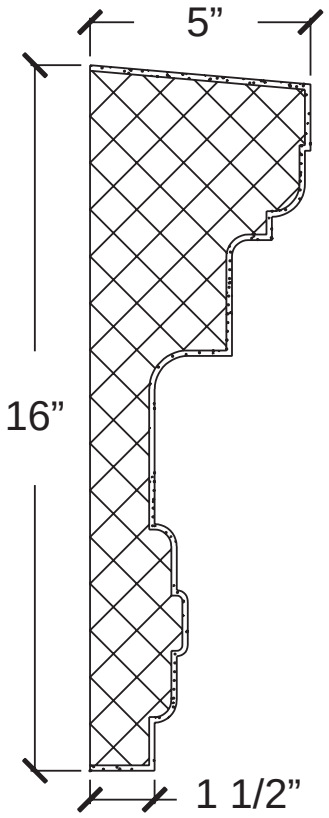

Scale: 1” = 4 1/4”

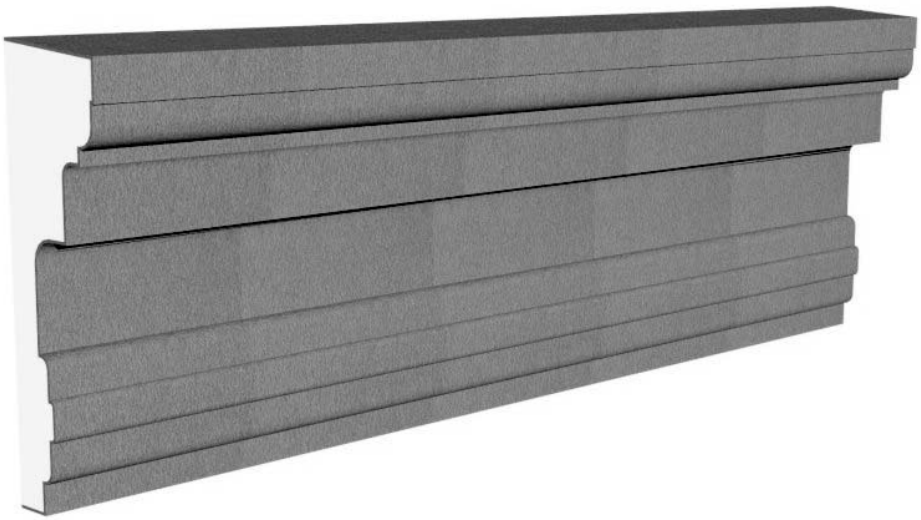


Promould® Line


www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 011

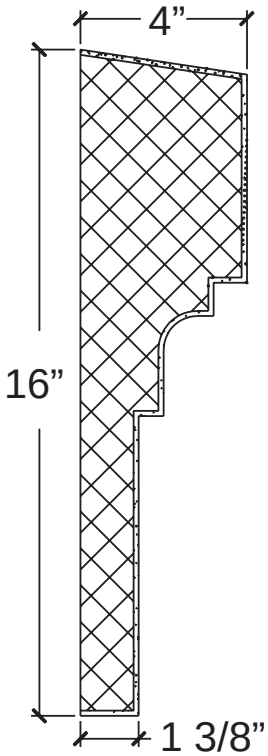

Scale: 1” = 4 1/2”

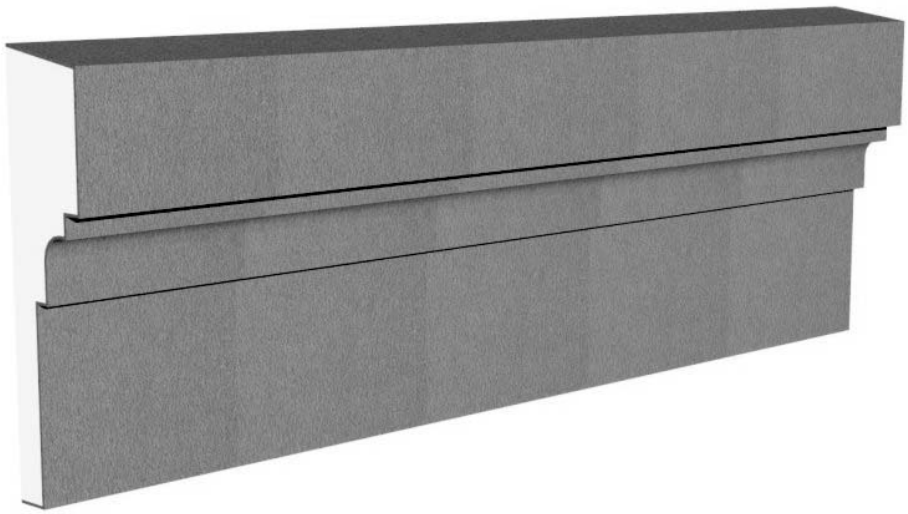


Promould® Line

www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 012

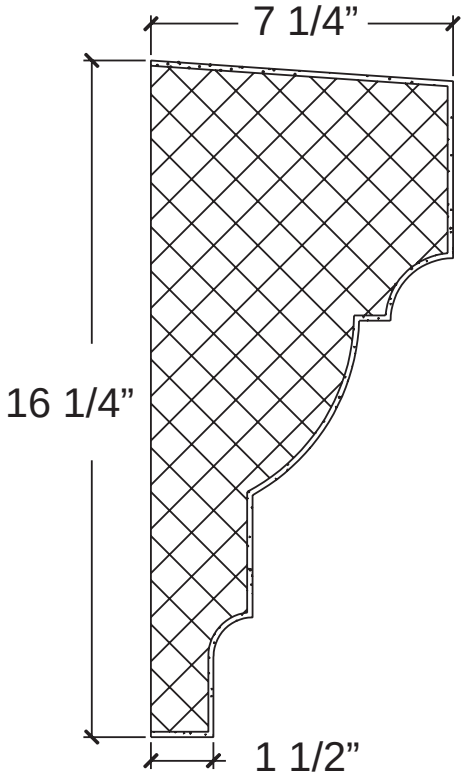

Scale: 1” = 4 1/2”




Promould® Line

www.decorawall.com


DECORAWALL INC.

Promould® Line

MIDBANDS - MB 014

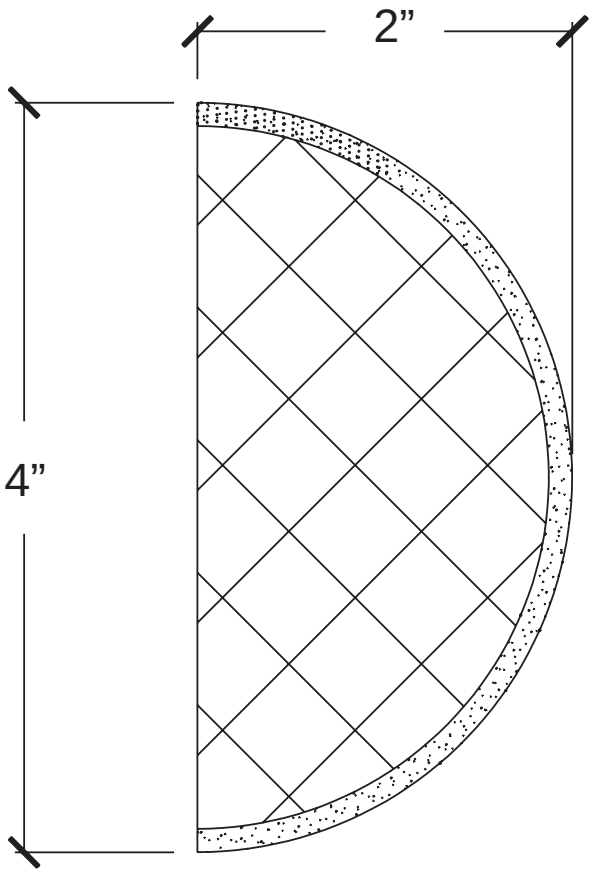


Scale: 1” = 1”

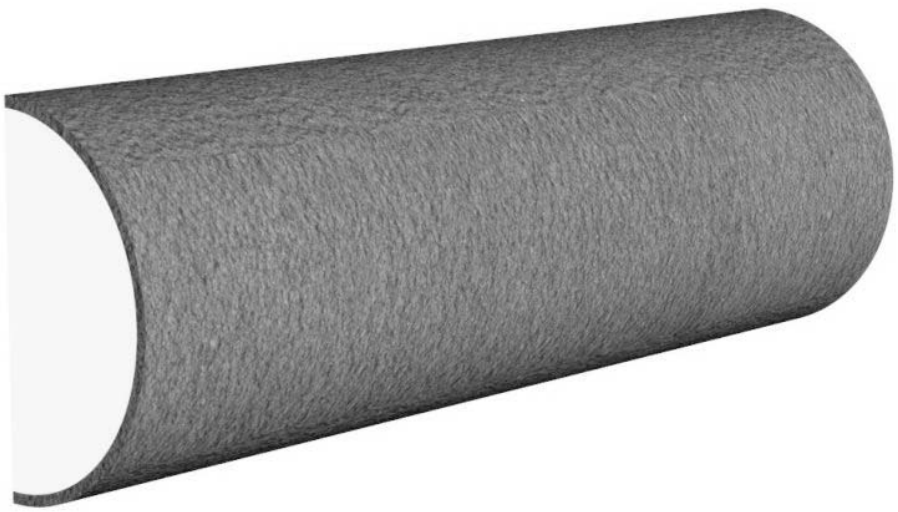


www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 015

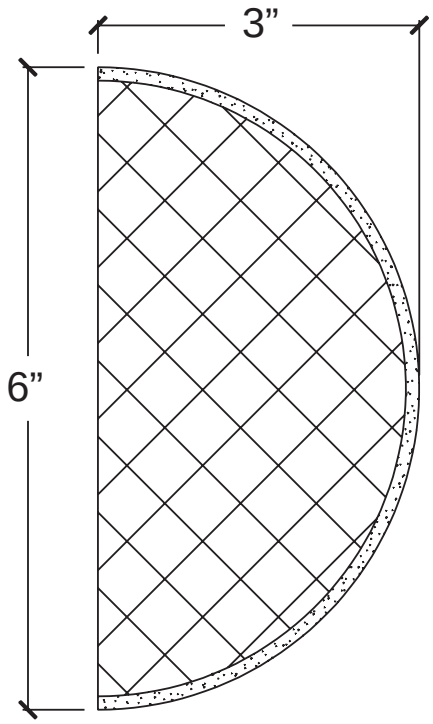


Scale: 1” = 1 3/4”

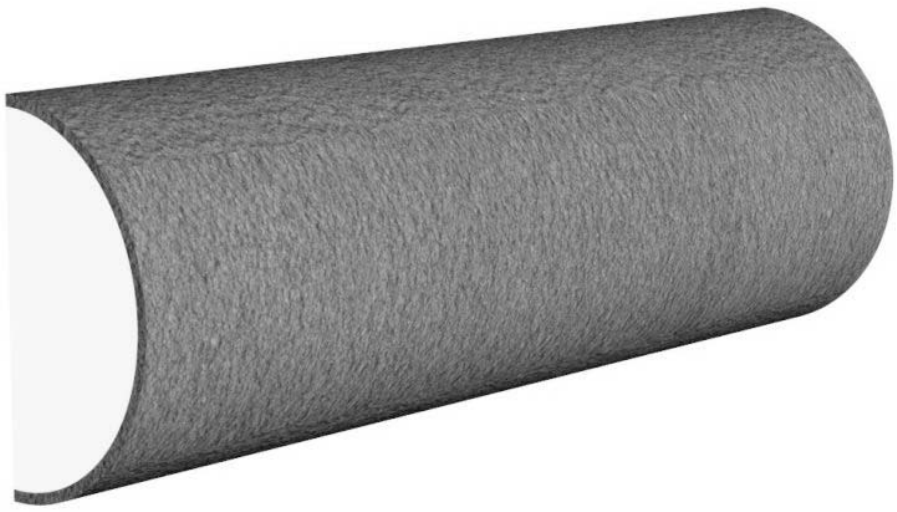


Promould® Line

DECORAWALL INC.

MIDBANDS - MB 016

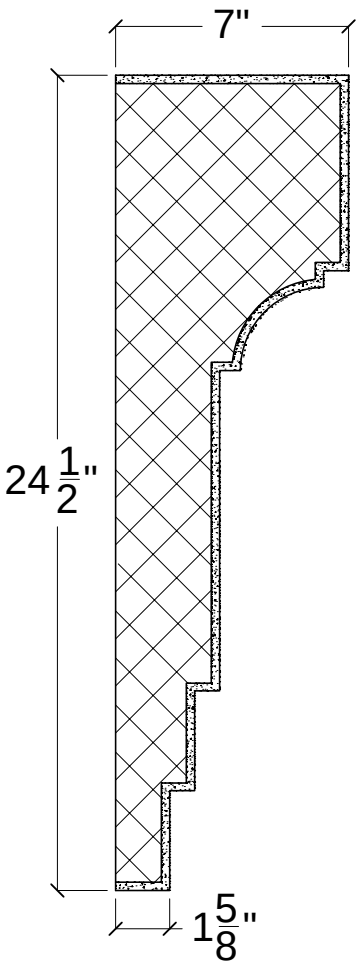

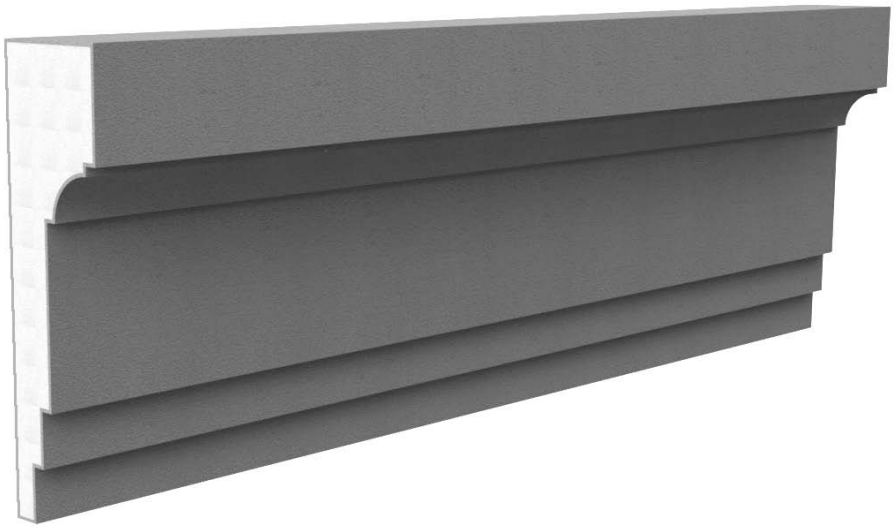



Promould® Line

www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 017

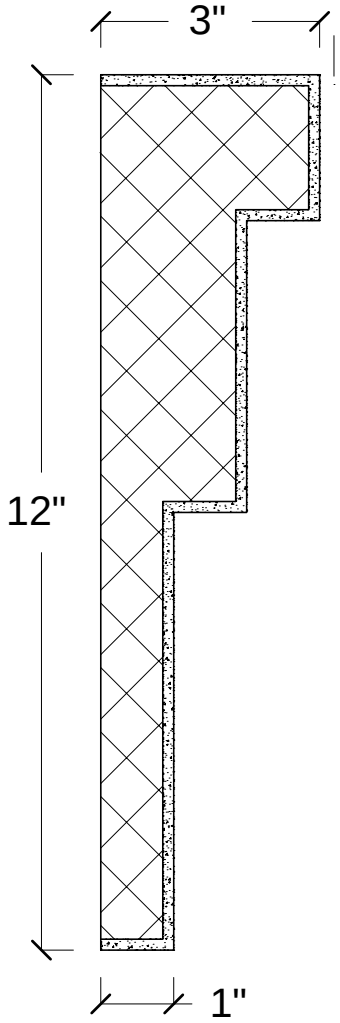

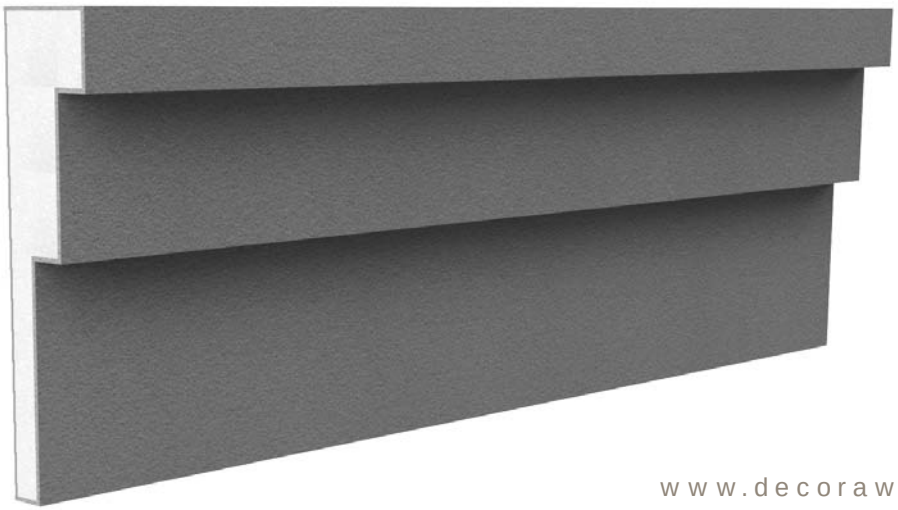



Promould® Line

www.decorawall.com

DECORAWALL INC.

MIDBANDS - MB 018

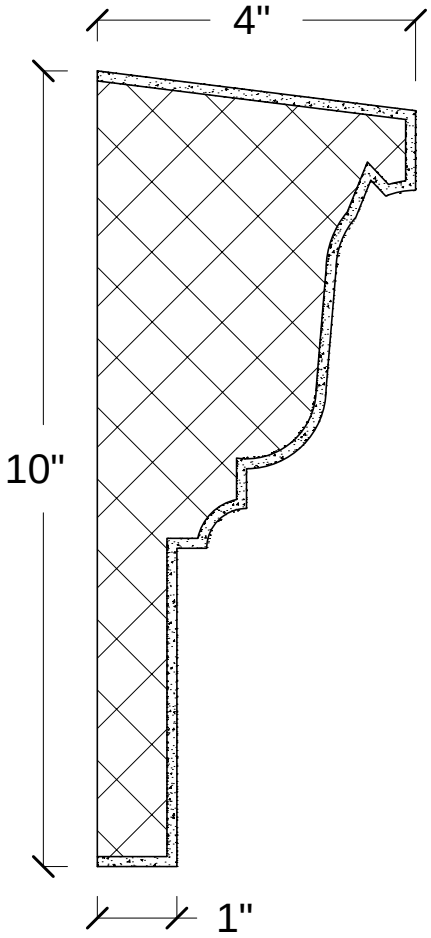

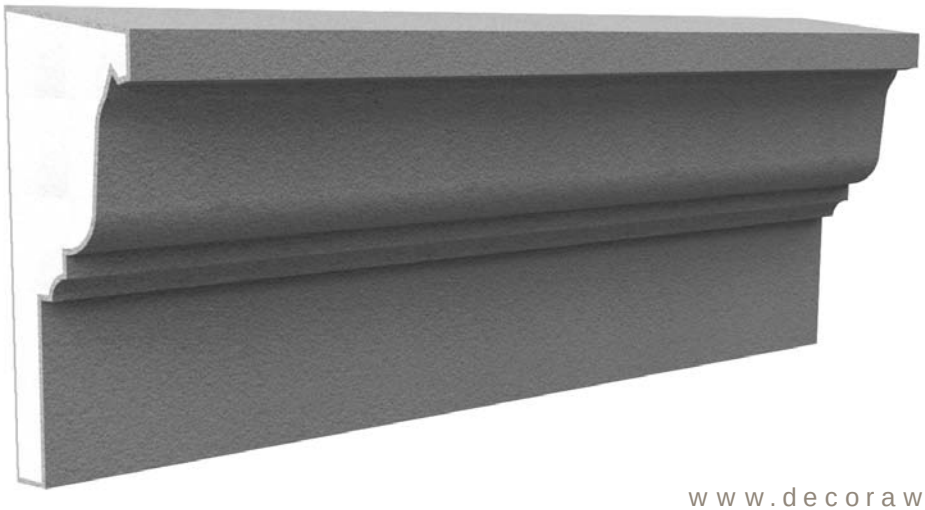


Promould® Line

www.decorawall.com

DECORAWALL INC.

CORNICE - CR 001

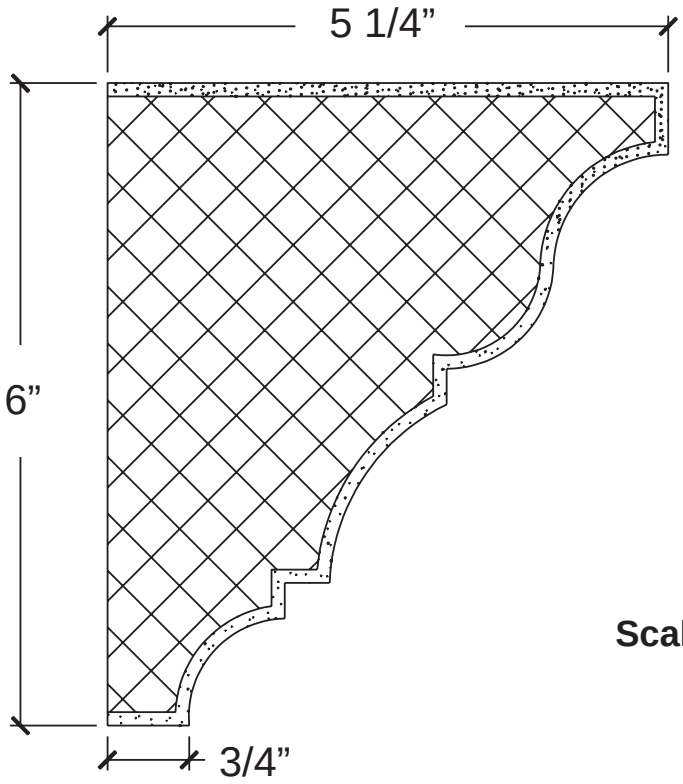

Scale: 1” = 1 3/4”




Promould® Line


091220

DECORAWALL INC.

CORNICE - CR 002

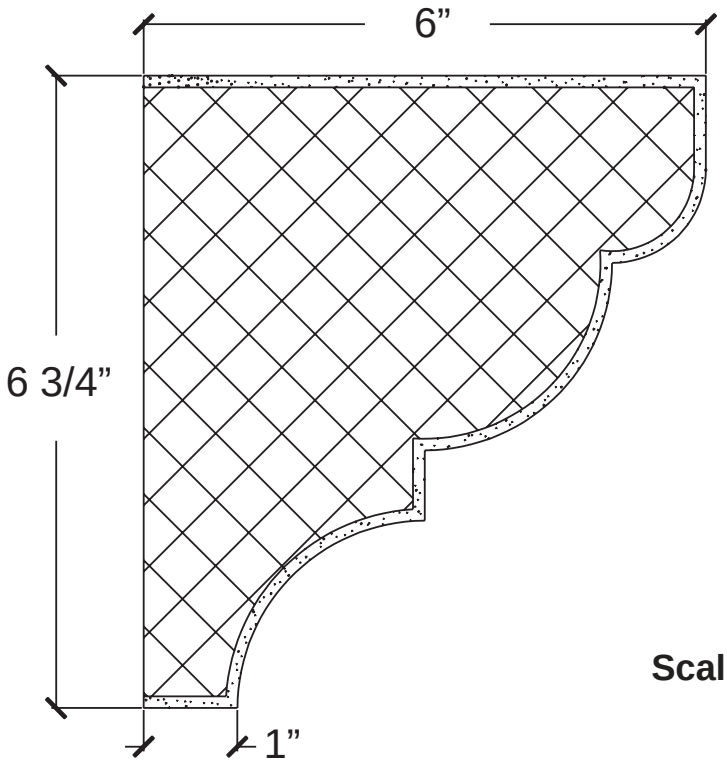

Scale: 1” = 2”

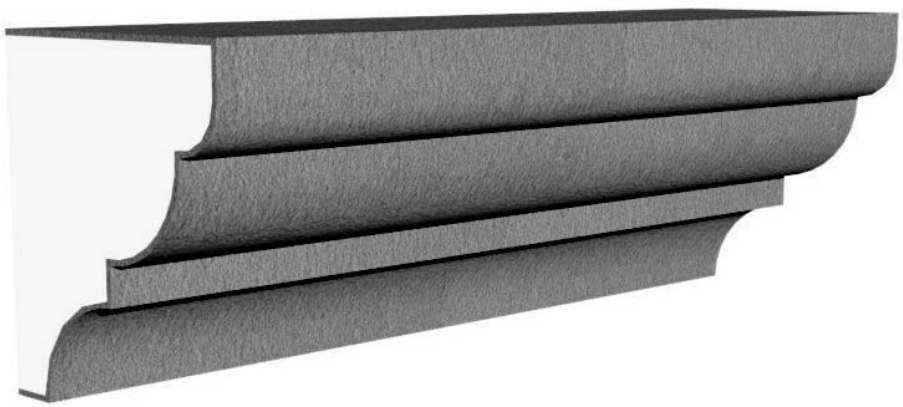


Promould® Line

www.decorawall.com

091220

DECORAWALL INC.

CORNICE - CR 003

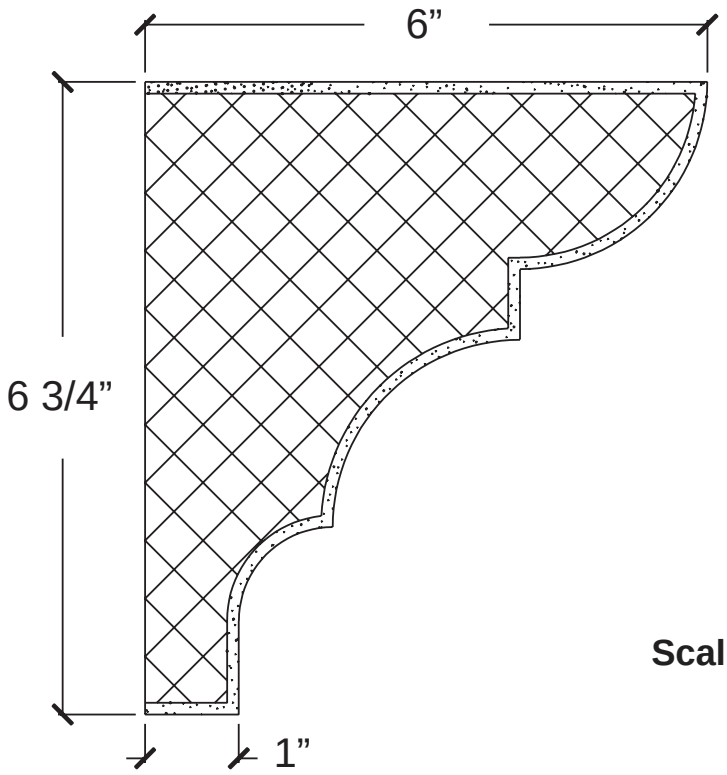

Scale: 1” = 2”




Promould® Line


091220

DECORAWALL INC.

CORNICE - CR 004

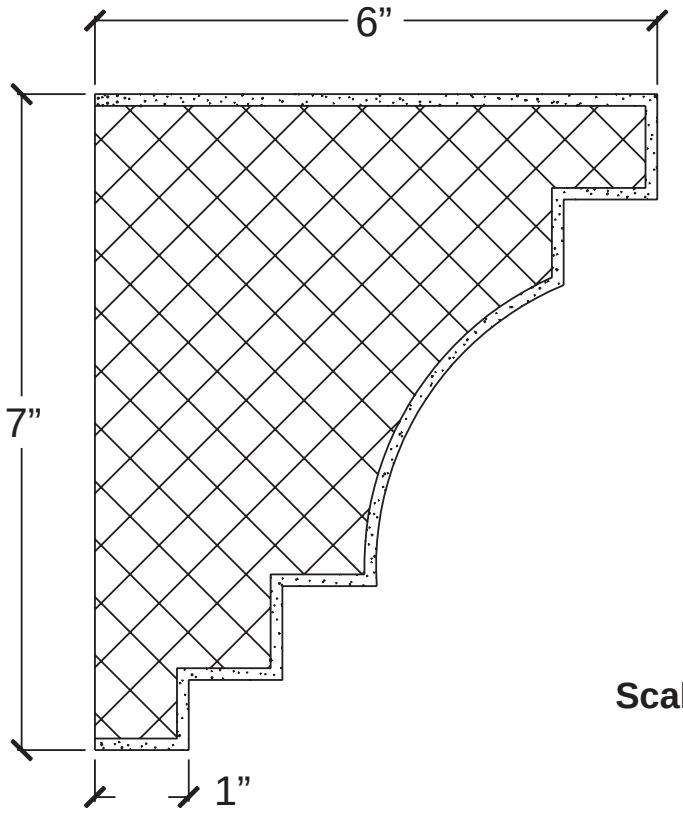

Scale: 1” = 2”

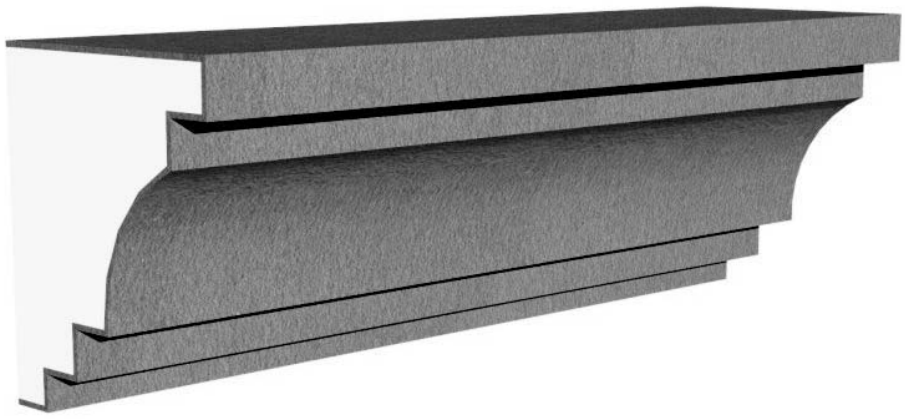


Promould® Line


www.decorawall.com

DECORAWALL INC.

CORNICE - CR 005

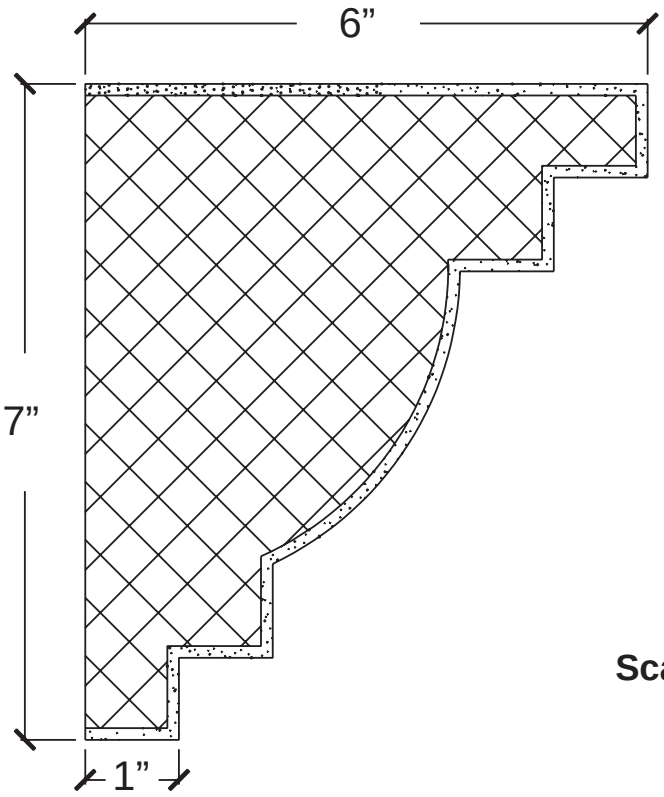

Scale: 1” = 2”

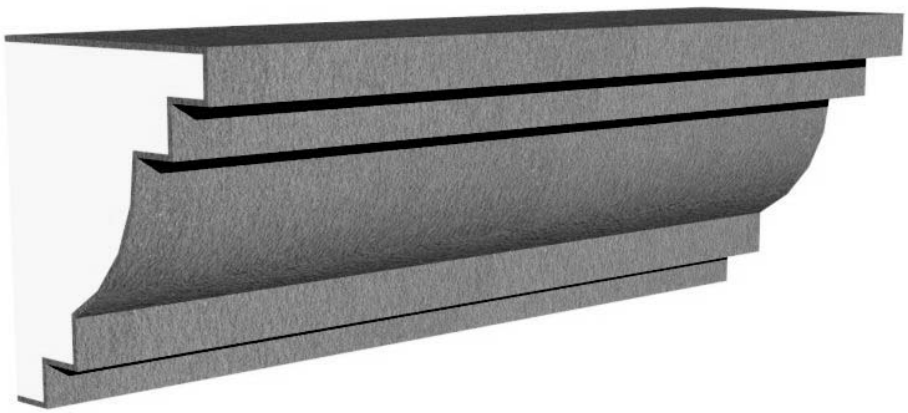


Promould® Line


091220

DECORAWALL INC.

CORNICE - CR 007

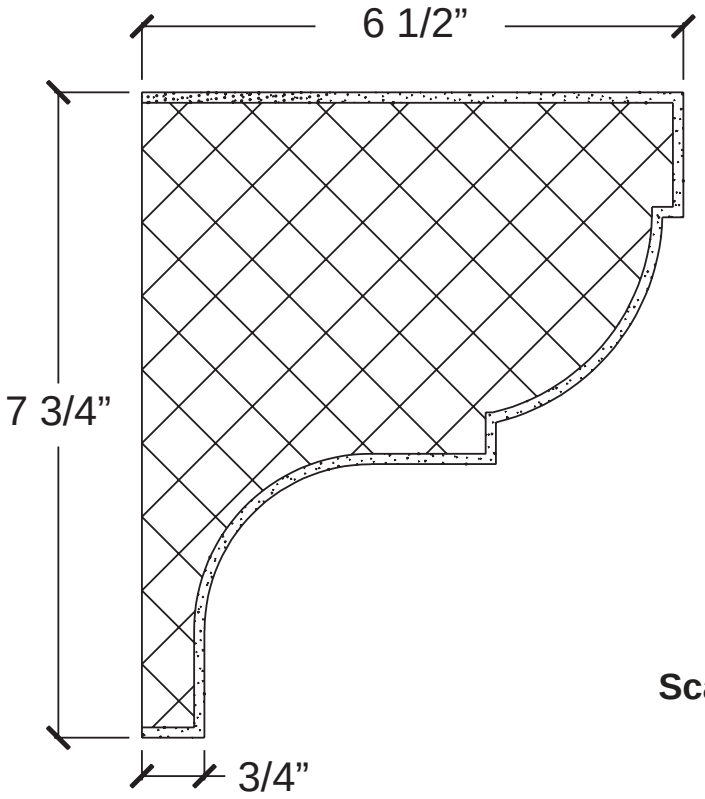


Scale: 1” = 2 1/4”

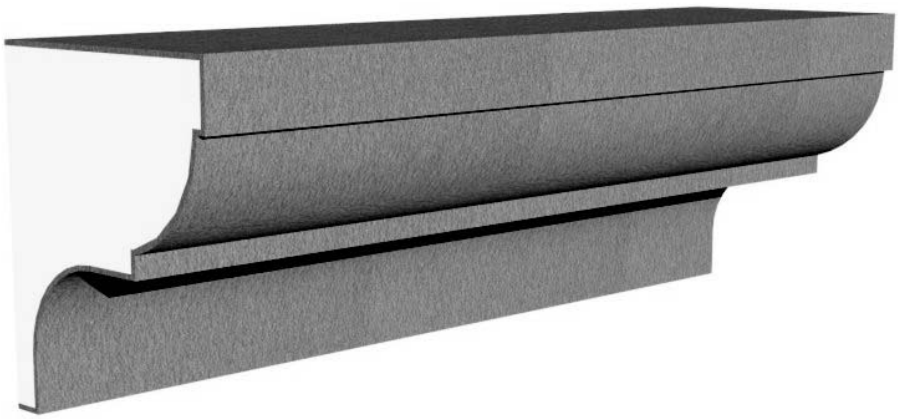

Promould® Line

DECORAWALL INC.

CORNICE - CR 008

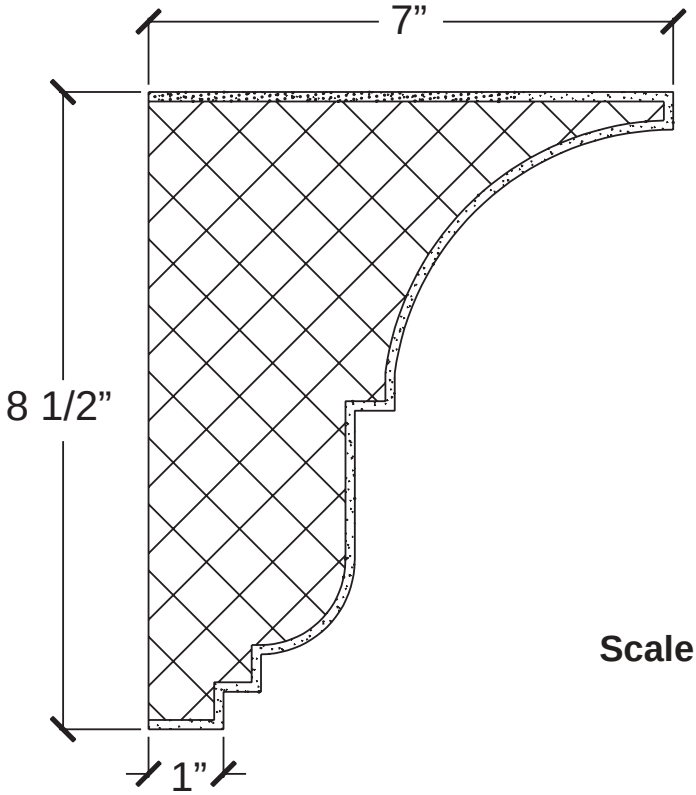

Scale: 1” = 2 1/2”




Promould® Line

www.decorawall.com

DECORAWALL INC.

CORNICE - CR 010

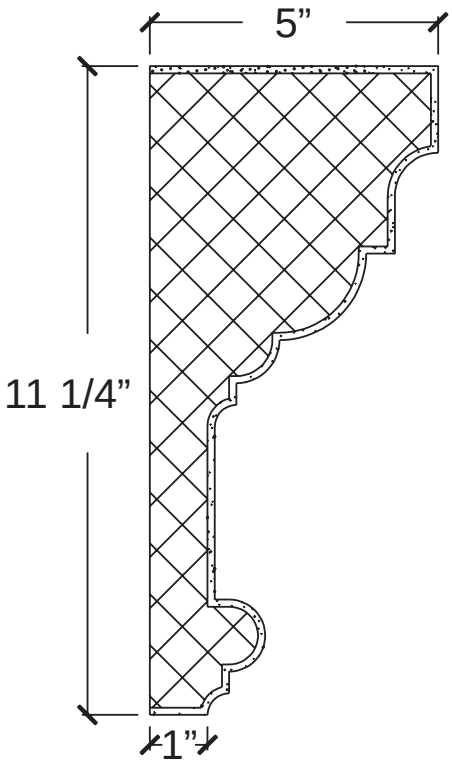

Scale: 1” = 3 1/4”




Promould® Line

www.decorawall.com

DECORAWALL INC.

CORNICE - CR 011

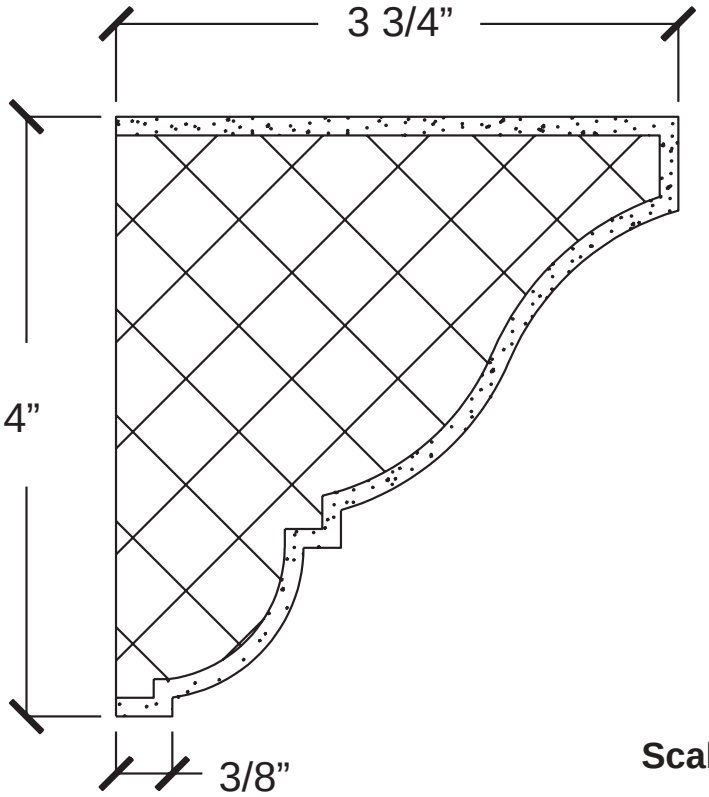

Scale: 1” = 1 1/4”




Promould® Line

091220

DECORAWALL INC.

CORNICE - CR 012

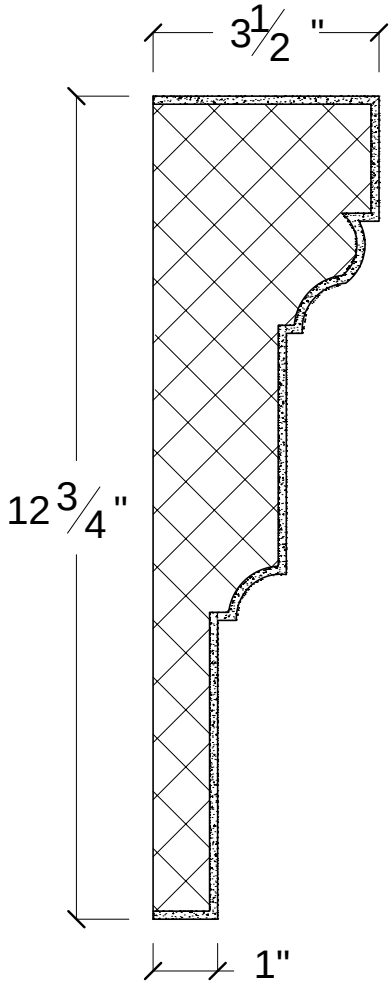





Promould® Line

091220

DECORAWALL INC.

CORNICE - CR 013

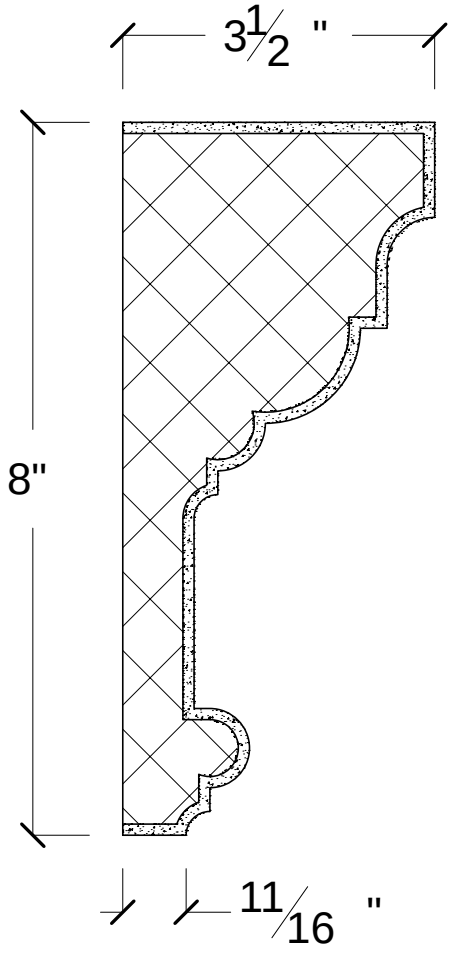

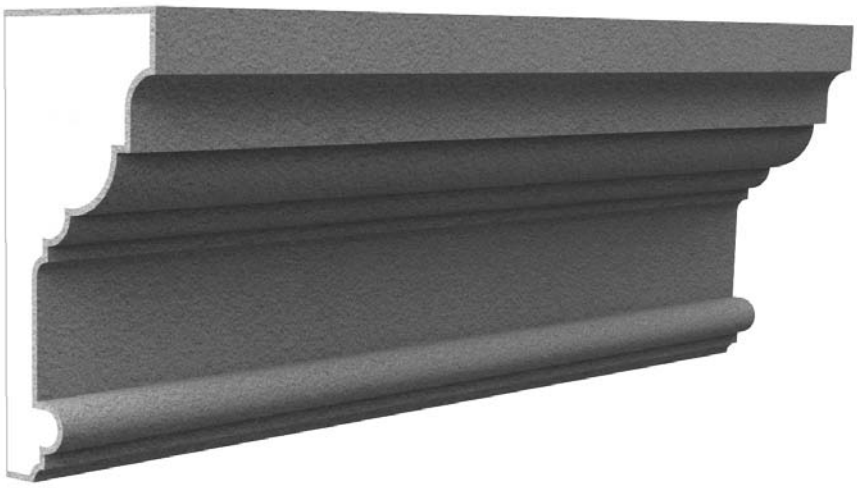


Promould® Line


091220

DECORAWALL INC.

PLAIN QUOINS

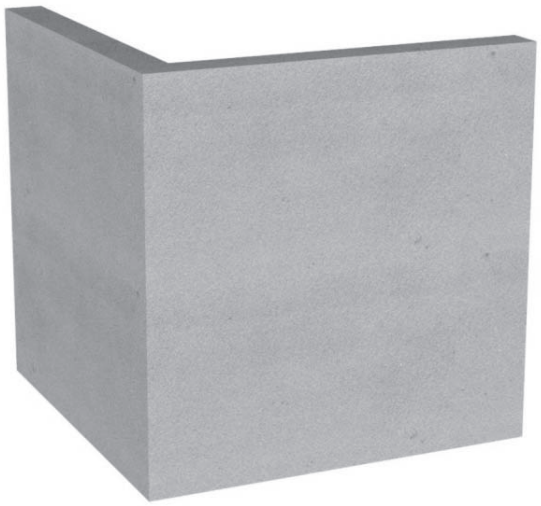

Product Code	a	b	c
QN 001	12”	12”	1”
QN 002	16”	12”	1”
QN 003	16”	16”	2”
QN 004	18”	18”	2”

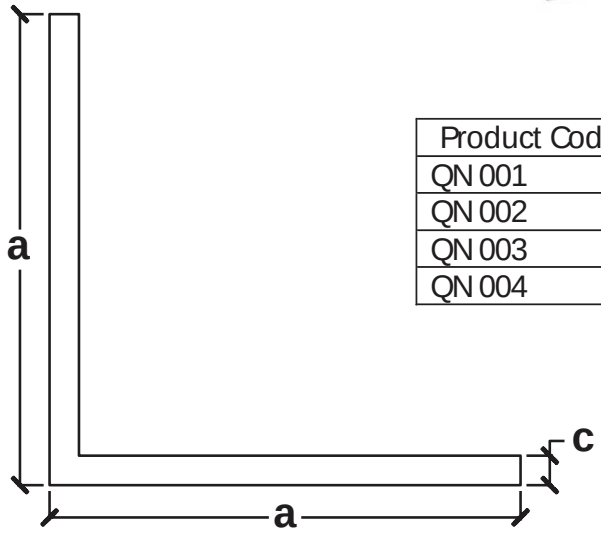




Promould® Line


DECORAWALL INC.


BEVELED QUOINS

Promould® Line

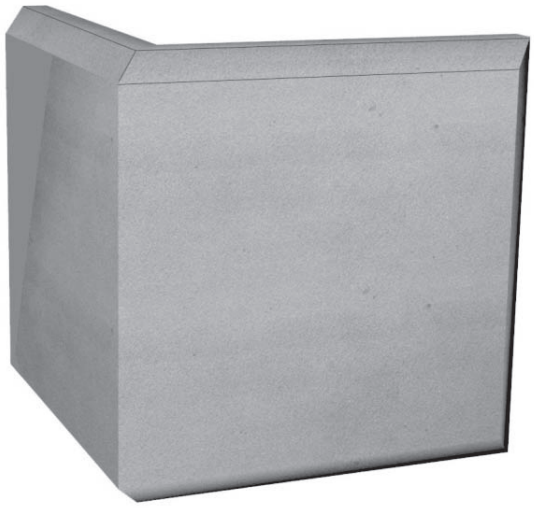

Product Code	a	b	c
QN 005	12”	12”	1 ½”
QN 006	16”	12”	1 ½”

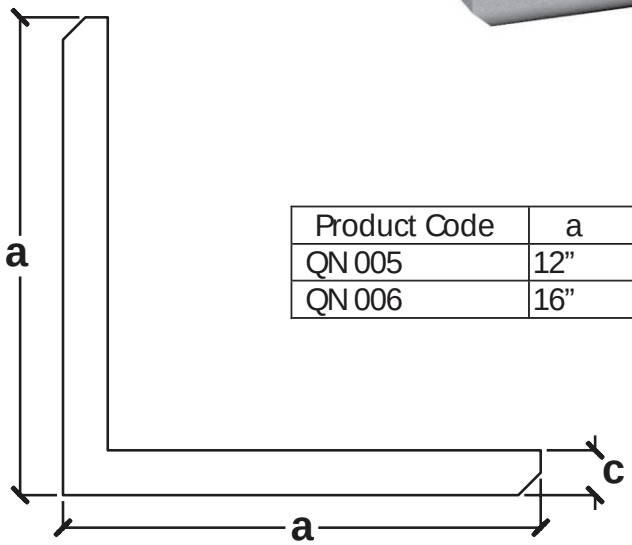


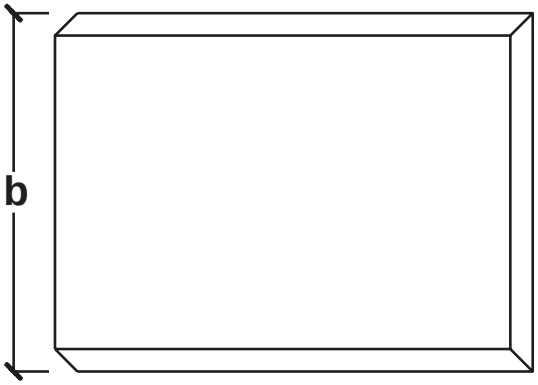


DECORAWALL INC.


STACKED BEVELED QUOINS




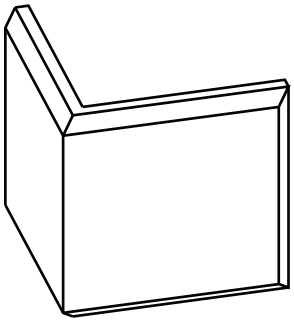

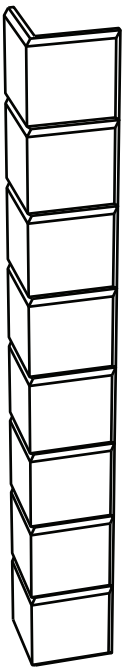

Product Code	a	b	c
QN 005s	12”	12”	1 ½” Stack Quoins - 8’
QN 006s	16”	12”	1 ½” Stack Quoins - 8’

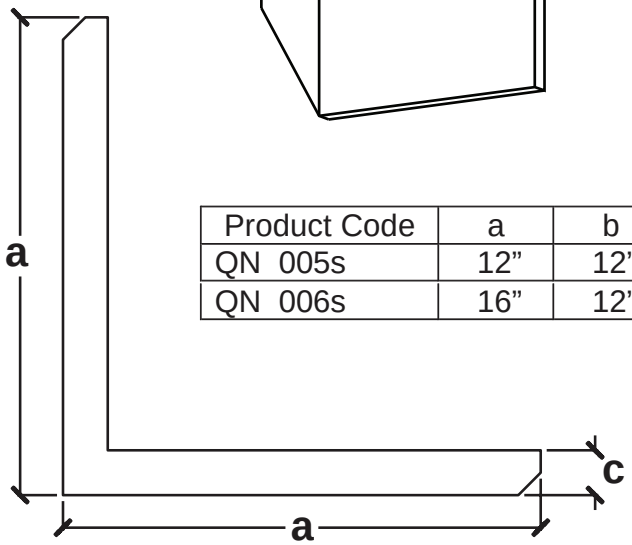

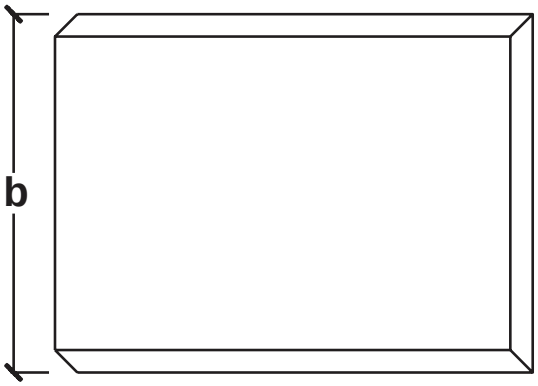

Promould® Line

DECORAWALL INC.

KEYSTONES




Product Code	Height	Thickness
KS501	8”	2”
KS502	8”	3”
KS503	8”	4”
KS505	10”	3”
KS506	10”	4”
KS507	12”	3”
KS508	12”	4”

Promould® Line

DECORAWALL INC.

PILASTERS

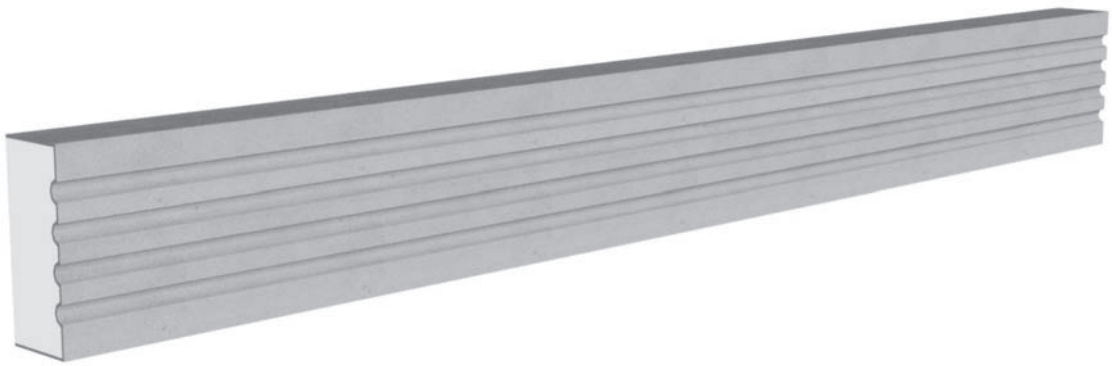


Product Code	Width	Thickness
PL001	8”	2”
PL002	10”	2”
PL003	12 ¼”	2”


Promould® Line

DECORAWALL INC.

PILASTERS - PL 010

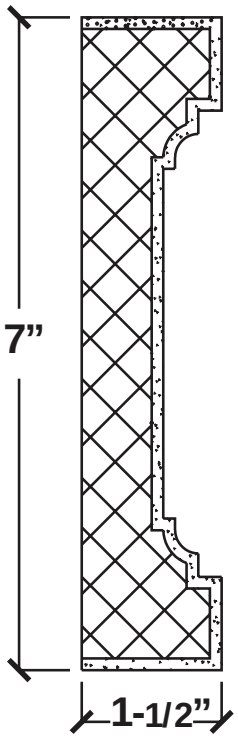


Scale: 1” = 1 1/2”

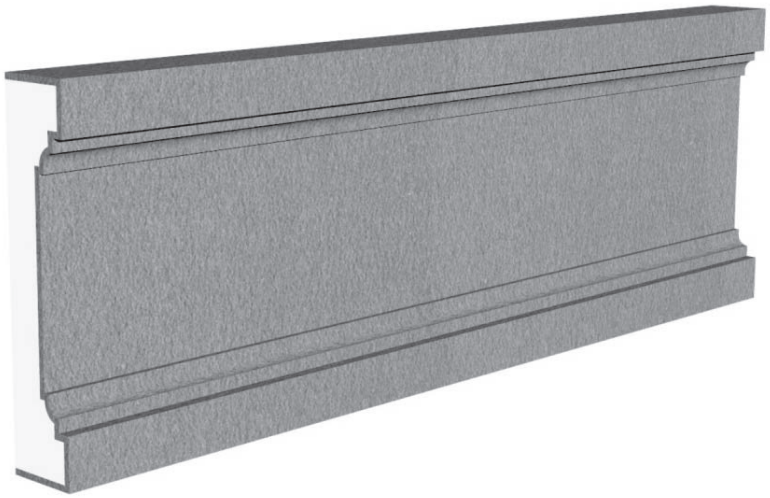

Promould® Line

DECORAWALL INC.

SMOOTH COLUMNS

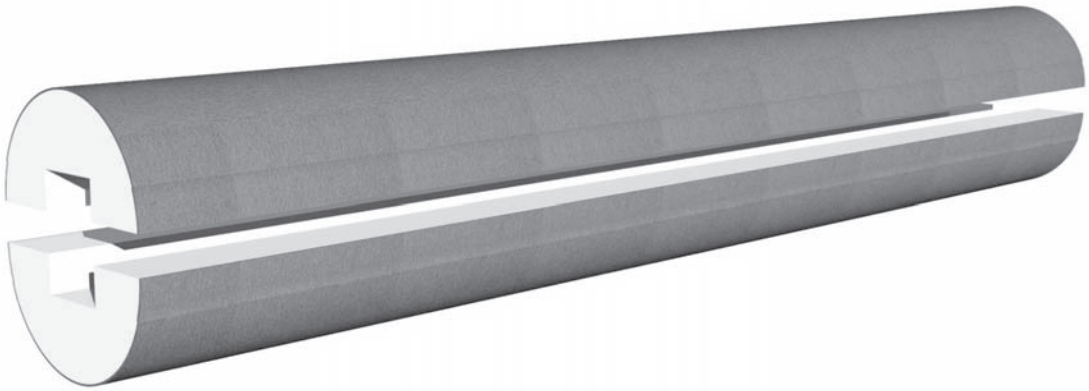


Code	Diameter		Code	Diameter
CL 001	8”		CL 006	18”
CL 002	10”		CL 007	20”
CL 003	12”		CL 008	22”
CL 004	14”		CL 009	24”
CL 005	16”			

All columns are sold in half pieces.

Promould® Line

DECORAWALL INC.

FLUTED COLUMNS

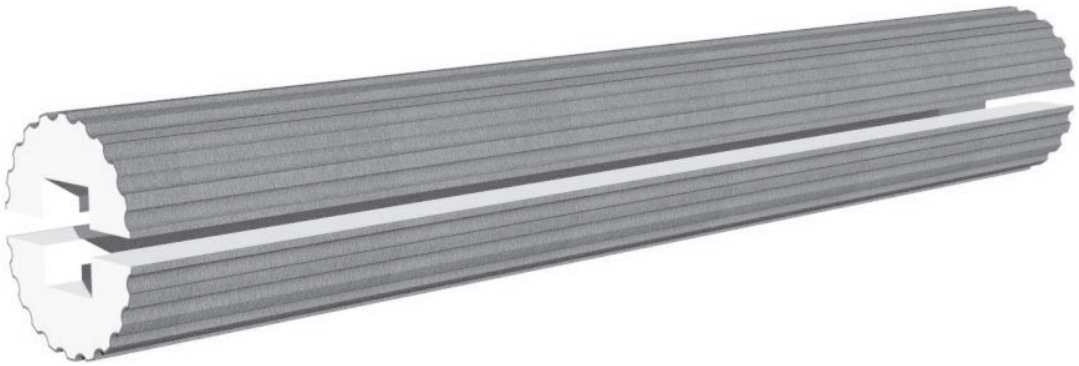


Code	Diameter		Code	Diameter
CL 010	8”		CL 015	18”
CL 011	10”		CL 016	20”
CL 012	12”		CL 017	22”
CL 013	14”		CL 018	24”
CL 014	16”			

All columns are sold in half pieces.

Promould® Line

DECORAWALL INC.

COLUMN BASE

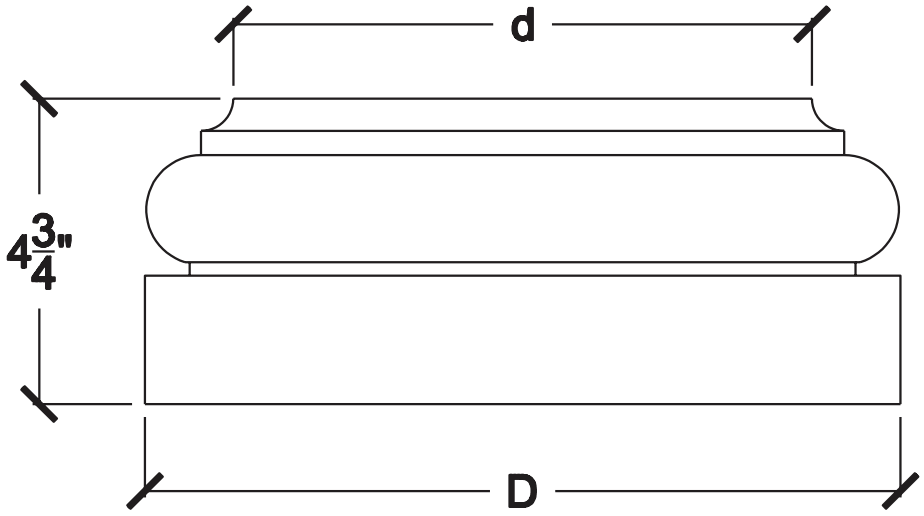


Code	d	D		Code	d	D
CB 401	9”	11 ¾”		CB 406	19”	21 ¾”
CB 402	11”	13 ¾”		CB 407	21”	23 ¾”
CB 403	13”	15 ¾”		CB 408	23”	25 ¾”
CB 404	15”	17 ¾”		CB 409	25”	27 ¾”
CB 405	17”	19 ¾”				



Promould® Line

DECORAWALL INC.

COLUMN CAP

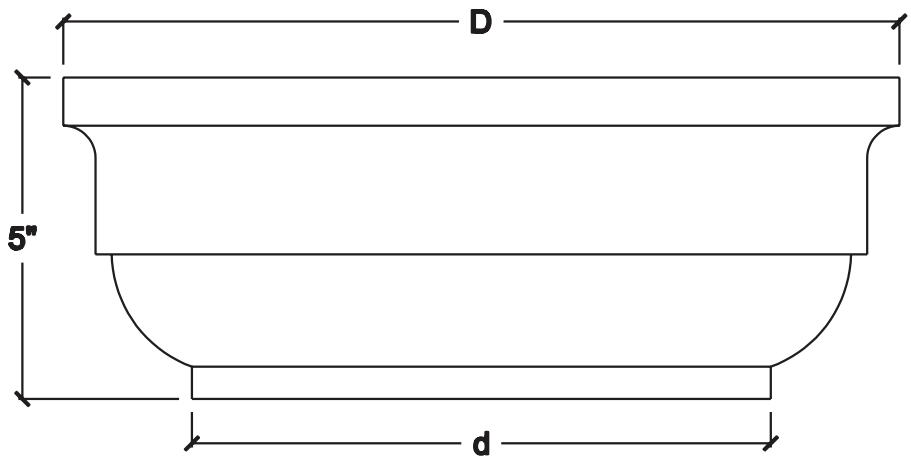

Code	d	D		Code	d	D
CP 401	9”	13”		CP 406	19”	23”
CP 402	11”	15”		CP 407	21”	25”
CP 403	13”	17”		CP 408	23”	27”
CP 404	15”	19”		CP 409	25”	29”
CP 405	17”	21”				



Promould® Line

5. INSTALLATION PROCEDURES:

Surface Conditions:

The substrate shall be dry and free of any dust, dirt, oil and grease, or any other contamination. The surface must be reasonably plumb, straight, and free of any loose material.

5.1 Conformity

Installation must conform to EIFS manufacturer's requirements for environmental conditions, applications, materials and preparations and to Decorawall exhibits and specifications.

Brief reminder:

- Frozen material should not be used.
- Application to frozen substrate is prohibited.
- Temperature before, during and until coatings cure should not be less than 5C (41°F).
- Surface must be clean and dry, free of loose material or any foreign material.

5.2 Standard Procedure for Molding Installation:

1. Dry fit and/or cut on site the molding as per the architectural drawings and existing structure.

2. Apply adhesive of system manufacturer to the back of the molding in a vertical pattern, using 3/8" notched trowel. If skinning occurs on adhesive, scrape off and replace it with fresh adhesive before installing the molding.

3. Press the molding into place using temporary mechanical fastener as per selected manufacturers system to secure molding while the adhesive cures.

4. Remove excess adhesive (if any) along the molding before curing.

5. Refer to system details, exhibits and follow the step by step installation procedure.

5.3 Substrate Details and Exhibits:

5.3.1 Exterior Insulation Finish System (EIFS) Detail:

5.3.1.A Exhibit 1.A: Base Coat & Fiberglass Mesh

This procedure is recommended for the following systems:

- Polystyrene
- Extruded Insulation
- Wire Mesh
- Fiber Mesh
- Mineral Wool
- Cement Board

Process of the exhibit shall commence prior to Primer:

Installation

5.3.1.A.1 Follow section 5.2, steps 1 to 5.
5.3.1.A.2 Spread evenly a layer of base coat over the molding and the substrate at least 2" a part.
5.3.1.A.3 Embed a 4" fiberglass mesh equally divided onto the base coat, smoothen the surface.
5.3.1.A.4 Allow for curing time.
5.3.1.A.5 Sand all surfaces and joints to a smoothen finish.

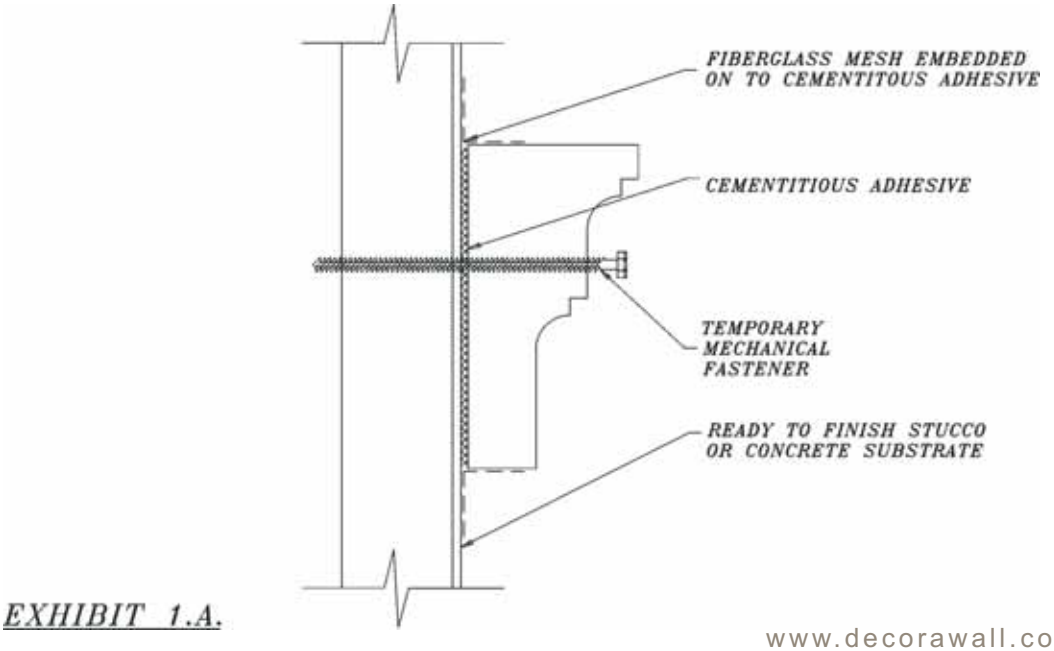


EXHIBIT 1.A.

5.3.1.C Exhibit 1.C: Base Coat and Caulking

This procedure is recommended for the following systems:

- Polystyrene
- Extruded Insulation
- Wire Mesh
- Fiber Mesh
- Mineral Wool
- Cement Board

Process of the exhibit shall commence prior to Primer:

Installation

5.3.1.C.1 Follow section 5.2, steps 1 to 5.

5.3.1.C.2 Apply caulking at the joint between the molding and the substrate.

5.3.1.C.3 Allow material to cure.

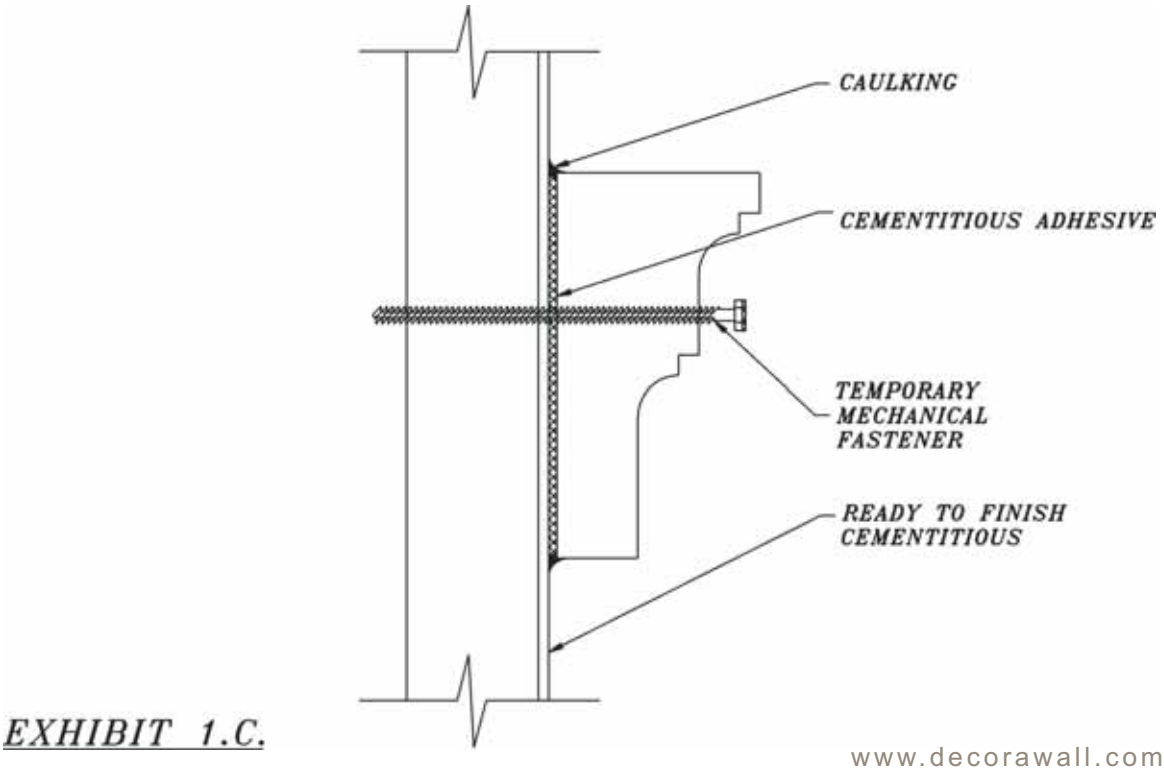


EXHIBIT 1.C.

5.3.2 Masonry Detail:

Decorawall's pre-coated architectural details should not be installed over weep holes when used above or below an opening. Refer to the Regional Building Code and/or to the National Building Code for clearance.

5.3.2.A Exhibit 2.A: Base Coat and Caulking

5.3.2.A.1 Follow section 5.2, steps 1 to 5.

5.3.2.A.2 Apply caulking at the joint between the molding and the substrate.

5.3.2.A.3 Allow material to cure.

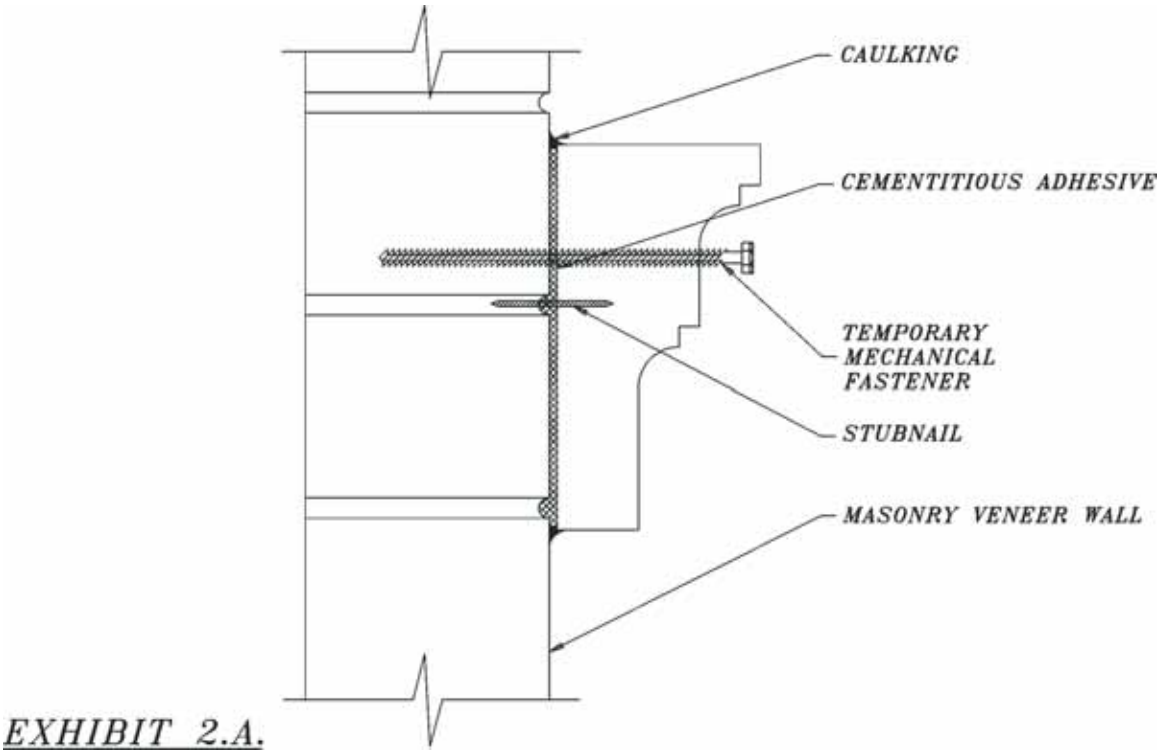


EXHIBIT 2.A.

5.3.5 Molding to Molding Detail:

5.3.5.A Exhibit 5.A: Caulking

5.3.5.A.1 Install moldings according to previous exhibits.

5.3.5.A.2 At the junction of the moldings leave a gap of not exceeding 1/2" (13mm).

5.3.5.A.3 Complete installation of the moldings.

5.3.5.A.4 After the coatings have cured, insert a back rod into the gap between the moldings.

5.3.5.A.5 Cover all joints with caulking.

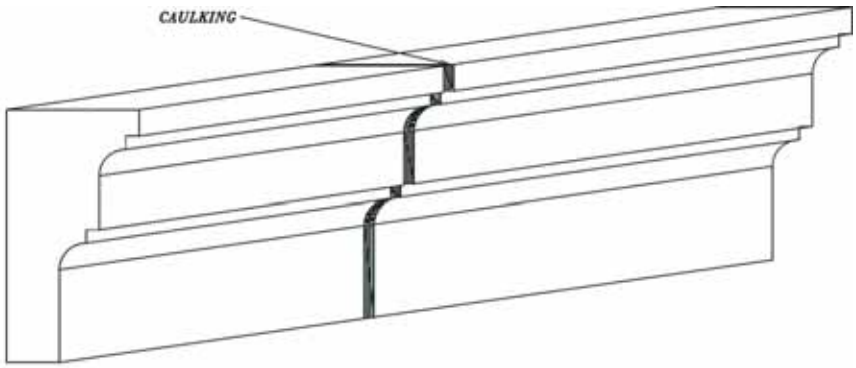


EXHIBIT 5.A.

5.3.5.B Exhibit 5.B: Base Coat and Fiberglass Mesh

5.3.5.B.1 Install moldings according to previous exhibits.

5.3.5.B.2 Moldings should be installed tight against each other with space not exceeding 1/16” (1 ½ mm).

5.3.5.B.3 Apply a layer of about 1/8” (3mm) thick of base coat over the miter joint per minimum 2” (50mm) on each side.

5.3.5.B.4 Embed a 4” (100mm) onto the base coat and smoothen the surface.

5.3.5.B.5 Allow time to cure.

5.3.5.B.6 Sand all joints to a smooth finish

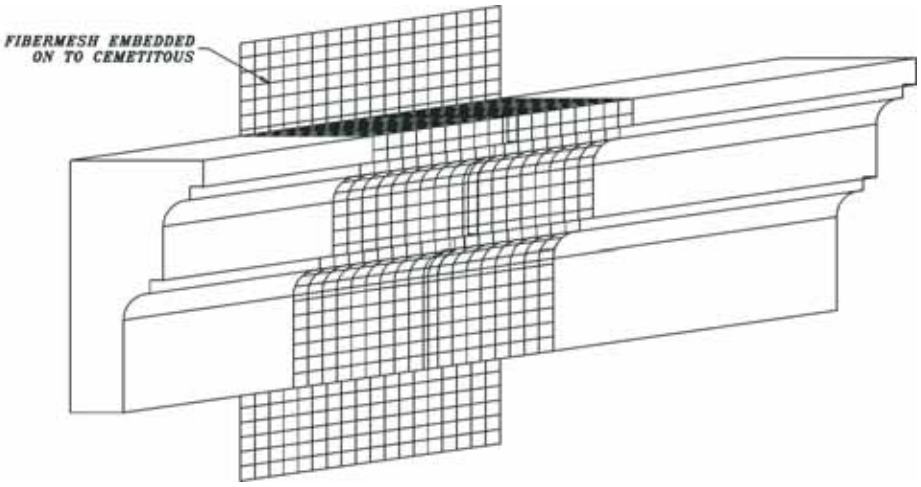


EXHIBIT 5.B.